

EXIT ALARMS OPERATING INSTRUCTIONS

5100, 5800 & 12-5800 Series

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

TO ARM ALARM:

All Series

Turning Key arms or disarms unit. Red signal below Cylinder indicates unit is armed.

NOTE: The unit is automatically armed 15 seconds after the unit is turned on.

SECURITY / TAMPER VIOLATION:

All Series

Horn sounds for 2 minutes unless deactivated by key. If not deactivated by key, horn will automatically turn off in two minutes and automatically rearm.

LOW BATTERY ALERT:

All Series

Intermittent chirp of horn and blinking light indicates low battery condition. Change battery.

MEMORY LED LIGHT:

All Series

Blinking light indicates violation has occurred.

BATTERY:

All Series

Use 9 volt alkaline battery #D 522 or E 1604.

NOTE: Installer please save this operating instruction sheet for the benefit of the building manager.
