
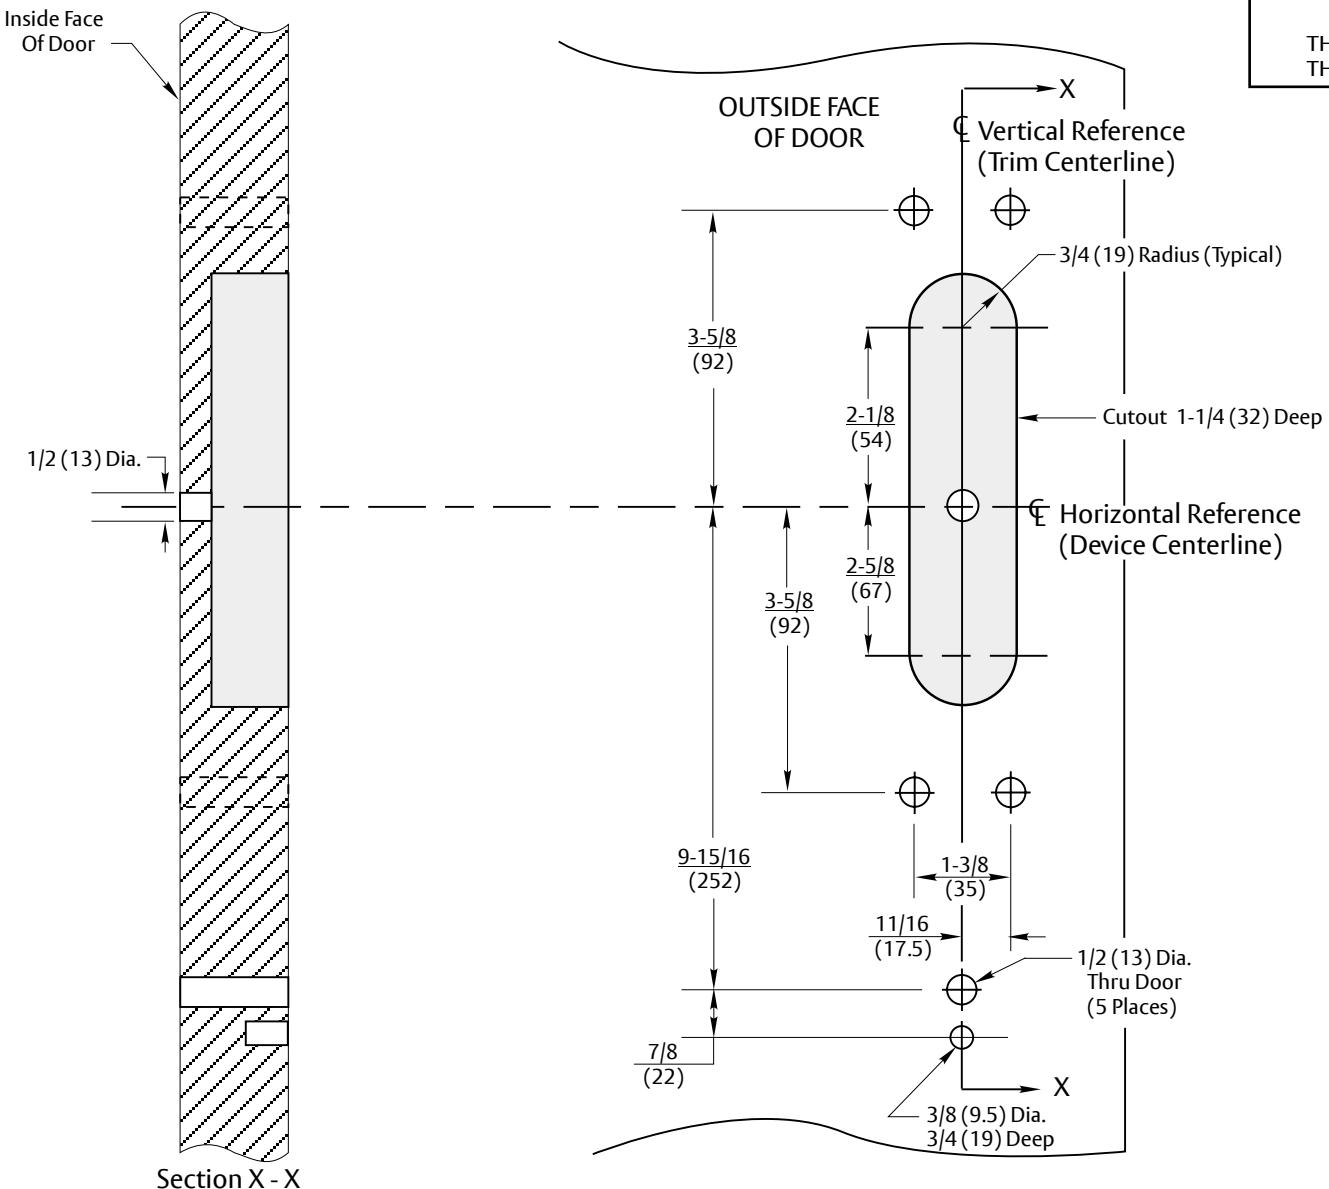


Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.
8. Unspecified radii 1/8 (3) maximum.

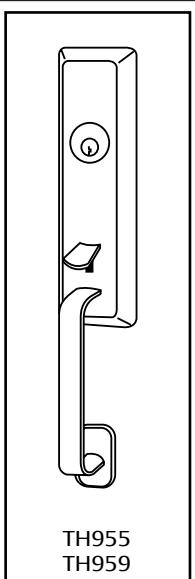

RESPONSIBILITY
 DOOR AND FRAME MANUFACTURERS ARE
 RESPONSIBLE FOR PROVIDING ADEQUATE
 CONSTRUCTIONS OR REINFORCEMENTS FOR
 PROPER INSTALLATION OF HARDWARE SHOWN.
 ALL ARCHITECTURAL BUILDERS HARDWARE MUST
 BE INSTALLED ON PROPERLY REINFORCED
 DOORS AND FRAMES, REGARDLESS OF TYPE,
 MATERIAL, OR METHOD OF CONSTRUCTION.

**TH955 & TH959 Trim
 With ED5200, ED5400 or ED5800 Series
 Rim and Vertical Rod Exit Devices
 Wood or Composite Door Preparation**

Corbin Russwin

ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES	DO NOT SCALE DRAWING	
TEMPLATE NUMBER	SHEET	DATE
	1 of 1	02/23