


NOTES:

1. FOR OUTSIDE TRIM PREPARATION. WHEN REQUIRED. SEE TRIM TEMPLATE.
2. WIRING TO E7500 & SS7500 LOCKS GOES THROUGH DOOR AND NOT DEVICE.
3. LHR APPLICATION SHOWN. RHR APPLICATION OPPOSITE.

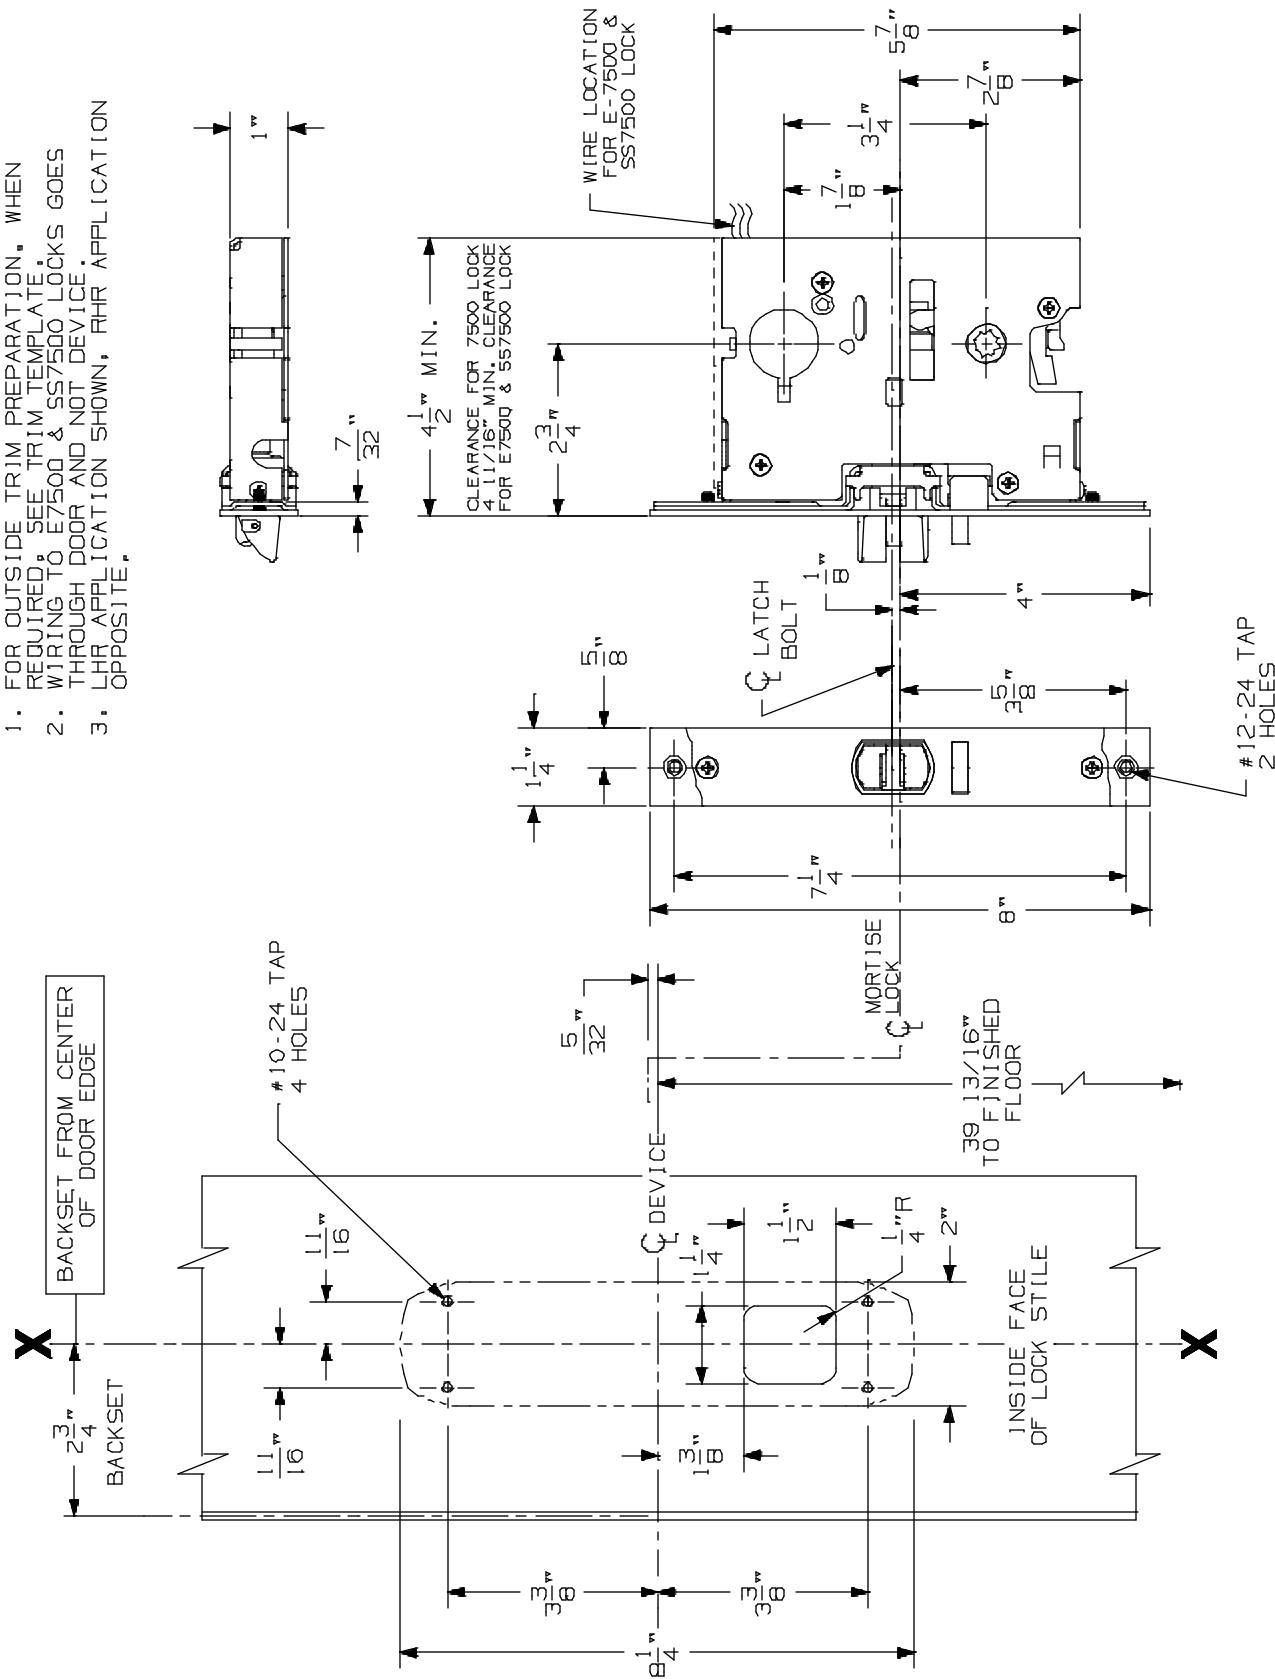

## 8875/8875-F Mortise Lock Device

**VON DUPRIN®**

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE  
NUMBER:

10179\_a

DATE:  
05-15-13