


NOTES:

1. THESE FOUR HOLES TO BE PREPARED FOR SURFACE APPLICATION WHEN USING 696/697 TRIM. DO NOT PREPARE FOR SIX BOLTS.
2. FOR STOCK HOLLOW METAL DOORS SEE TEMPLATE NUMBER 1032 FOR TYPE *66, CUTOUT.
3. GLASS BEAD KIT AVAILABLE WHEN REQUIRED.
4. WIRING TO SS7500 & E7500 LOCKS GO THROUGH DOOR NOT DEVICE.
5. FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED. SEE TRIM TEMPLATE.
6. CX DEVICE WIRES EXIT DEVICE NEAR HINGE SIDE.

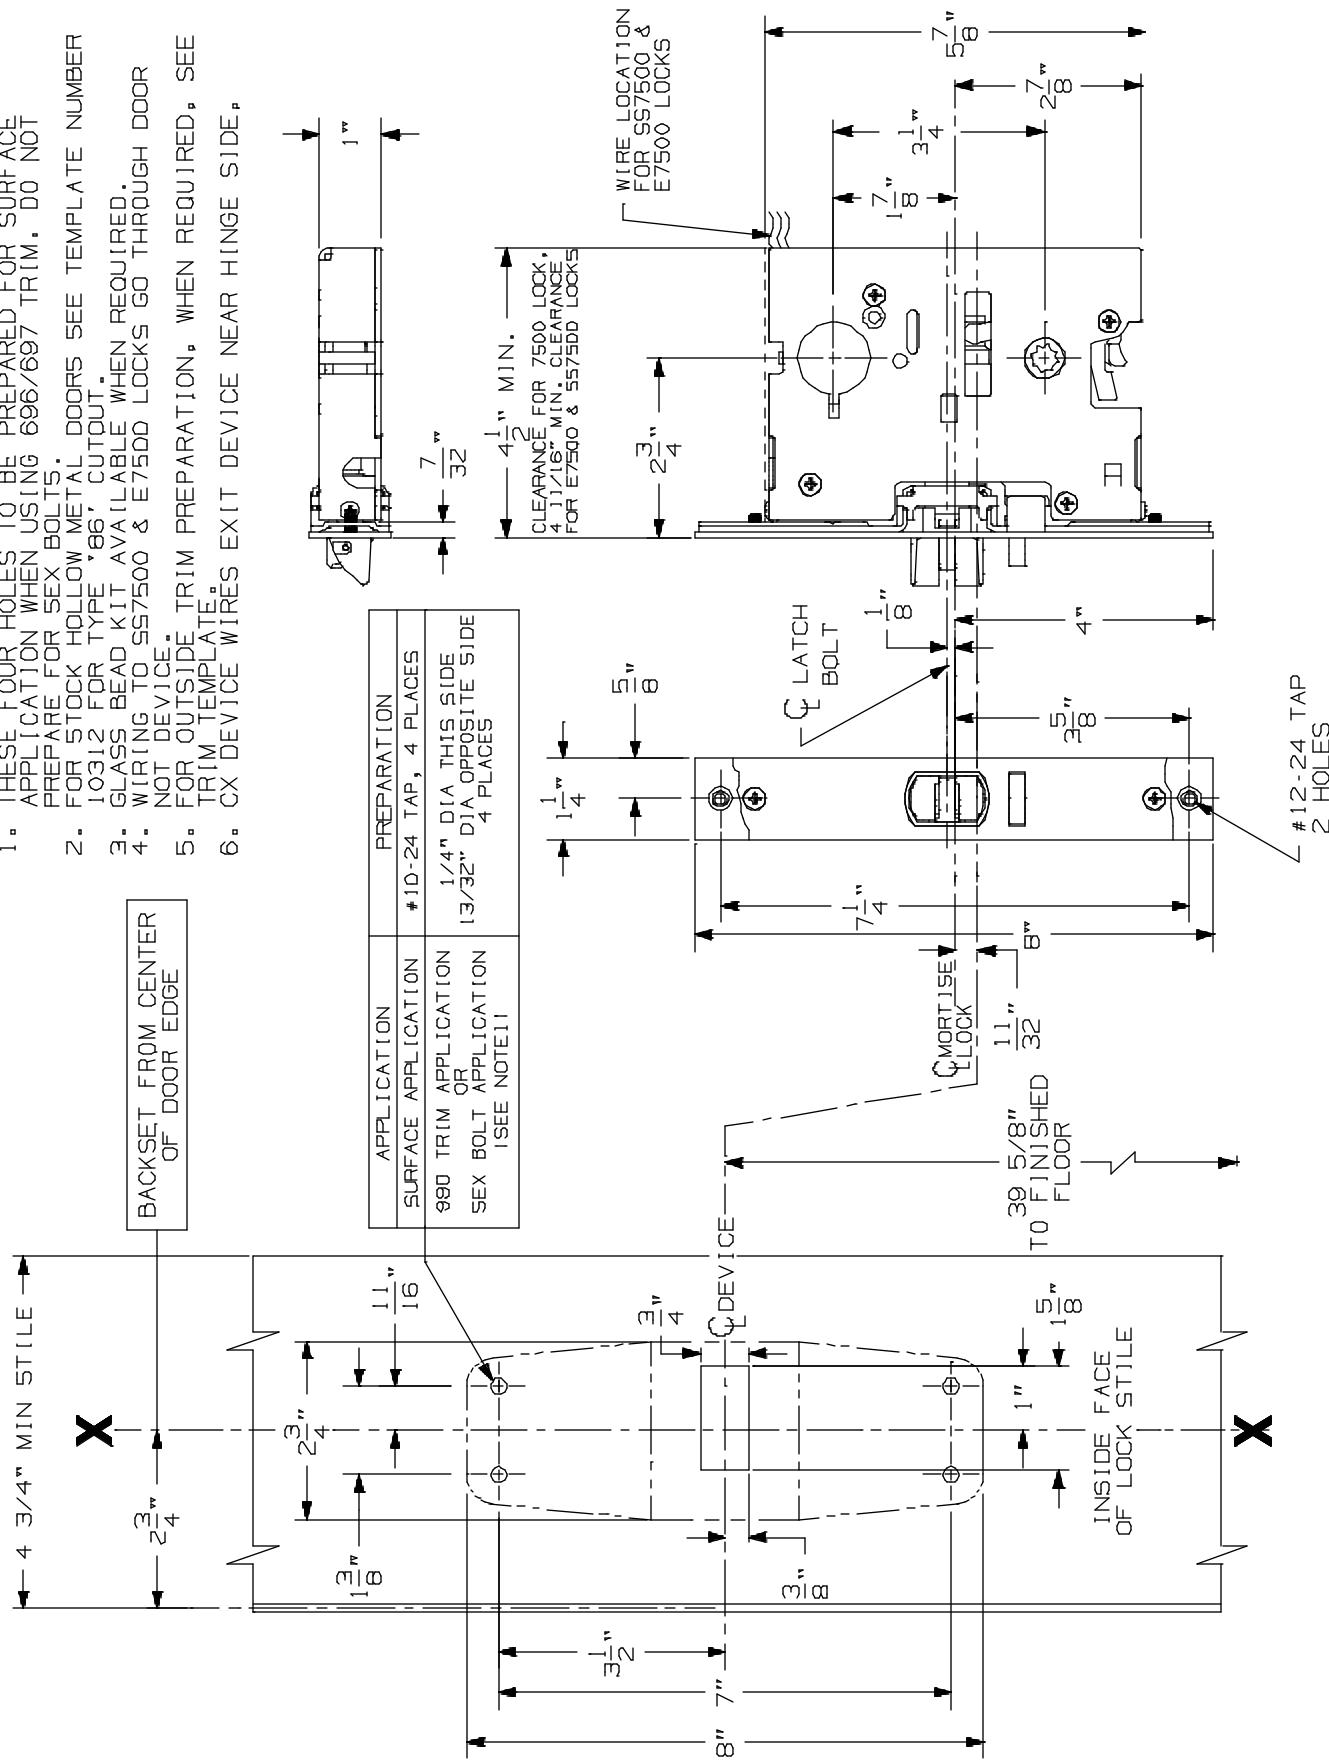

CX9875/9975 Series Mortise Lock Devices

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

10358_a

DATE:
05-22-13