


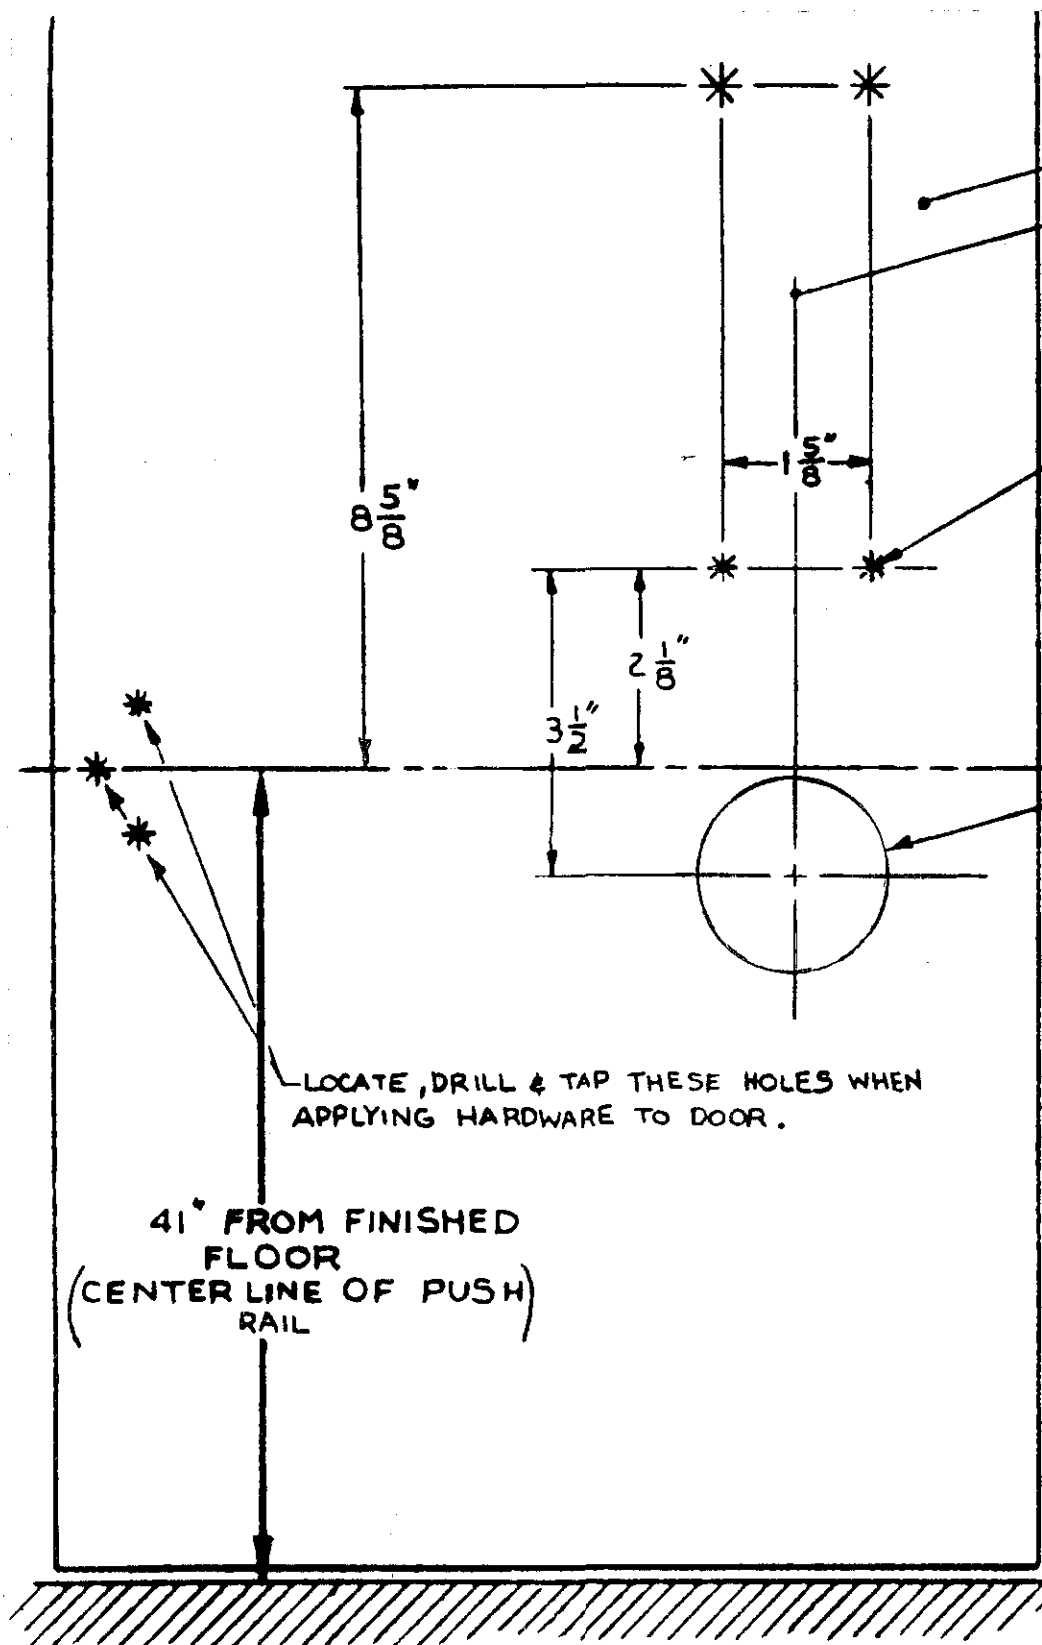

INSIDE FACE OF DOOR

VERTICAL REFERENCE LINE

#10-24 TAPPED HOLE
(4 REQ'D)


NOTE:
NO ADDITIONAL DOOR PREPARATION IS
REQUIRED FOR MOUNTING THE OUTSIDE TRIM.

¢ OF SENSOR BOLT AND
HORIZONTAL REFERENCE LINE

2 1/8" DIA HOLE THRU DOOR.

LOCATE, DRILL & TAP THESE HOLES WHEN
APPLYING HARDWARE TO DOOR.

41" FROM FINISHED
FLOOR
(CENTER LINE OF PUSH)
RAIL

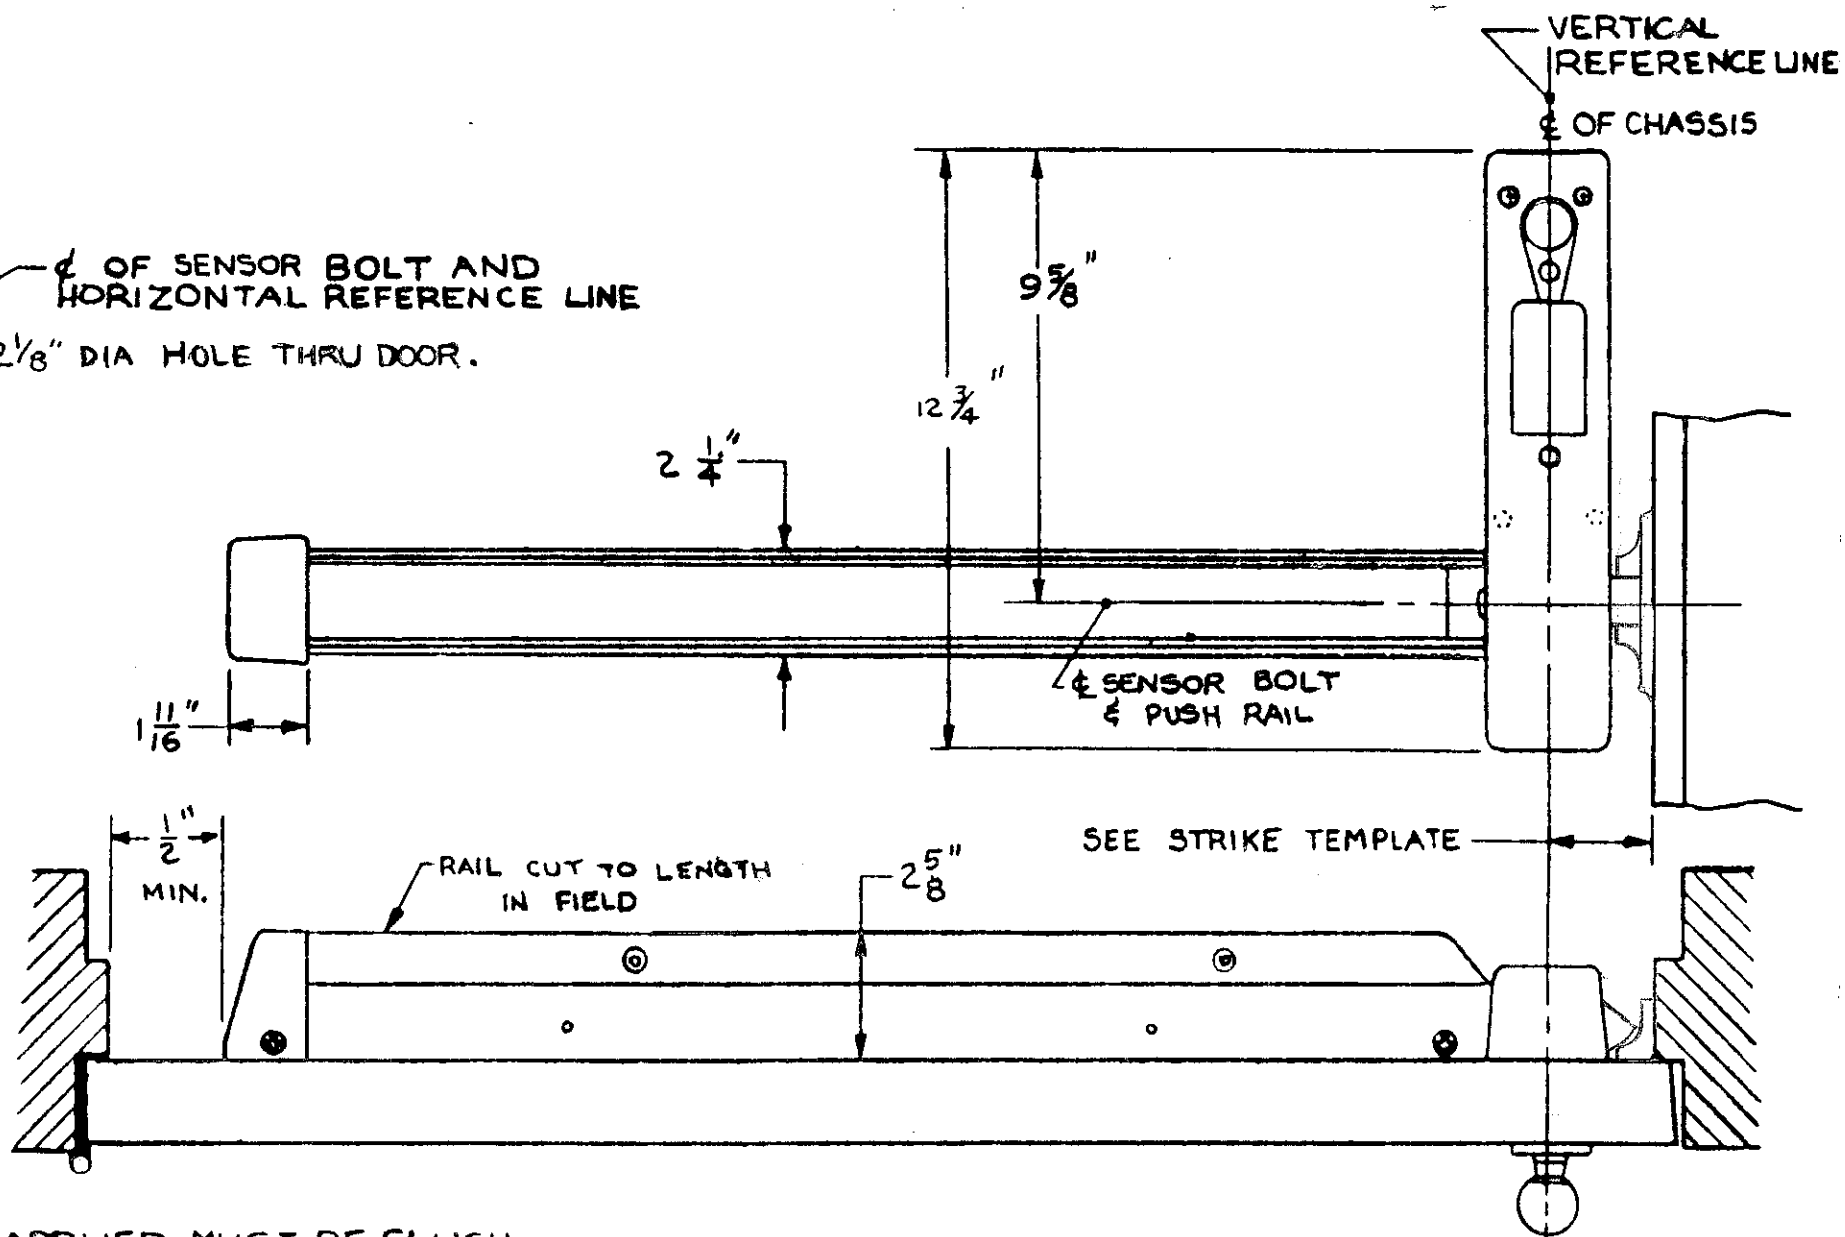

- ⑤—SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED, MUST BE FLUSH.
- ④—SEE TEMPLATE SHEET 4382 FOR AREAS REQUIRING REINFORCEMENTS.
- ③—SEE STRIKE TEMPLATE FOR MOUNTING LOCATION OF STRIKE.
- ②—② WE RECOMMEND THAT ALL HOLES BE DRILLED & TAPPED IN FIELD.
- ①—TOLERANCE ON ALL FRACTIONAL DIMENSIONS $\pm 1/64$ ".

SARGENT & COMPANY

NEW HAVEN, CONN. 06509

TEMPLATE:
12-5800 SERIES ALARMED FIRE
EXIT DEVICE X "OB" KNOB TRIM
OR LL LEVER HANDLE TRIM.

RELEASE DATE
12 JUL 94
TEMPLT NO.
4377B