

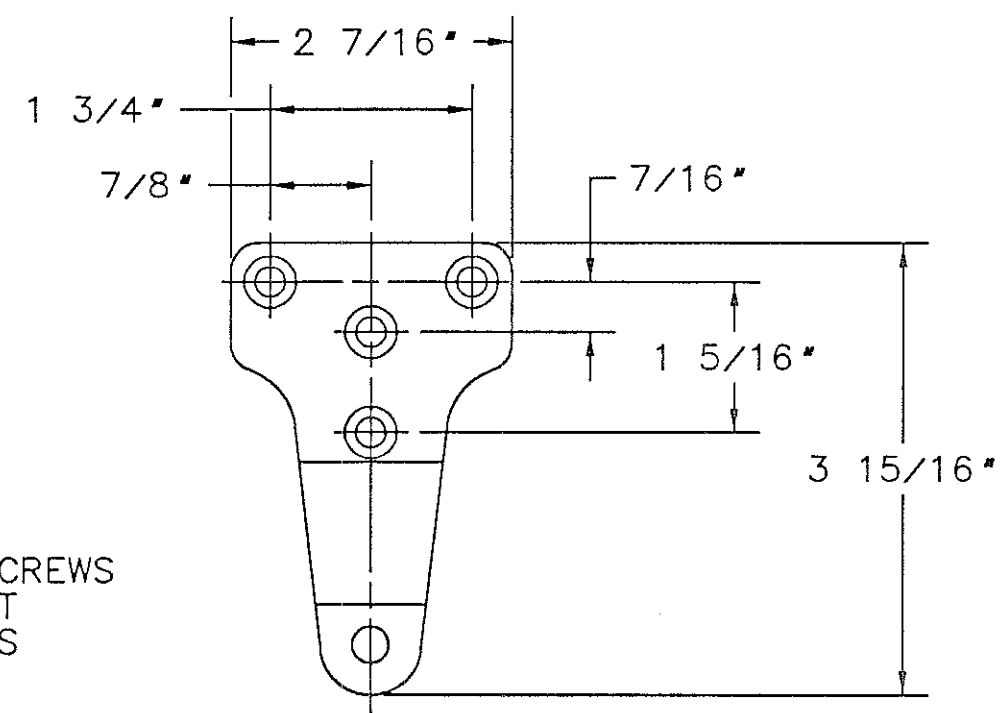


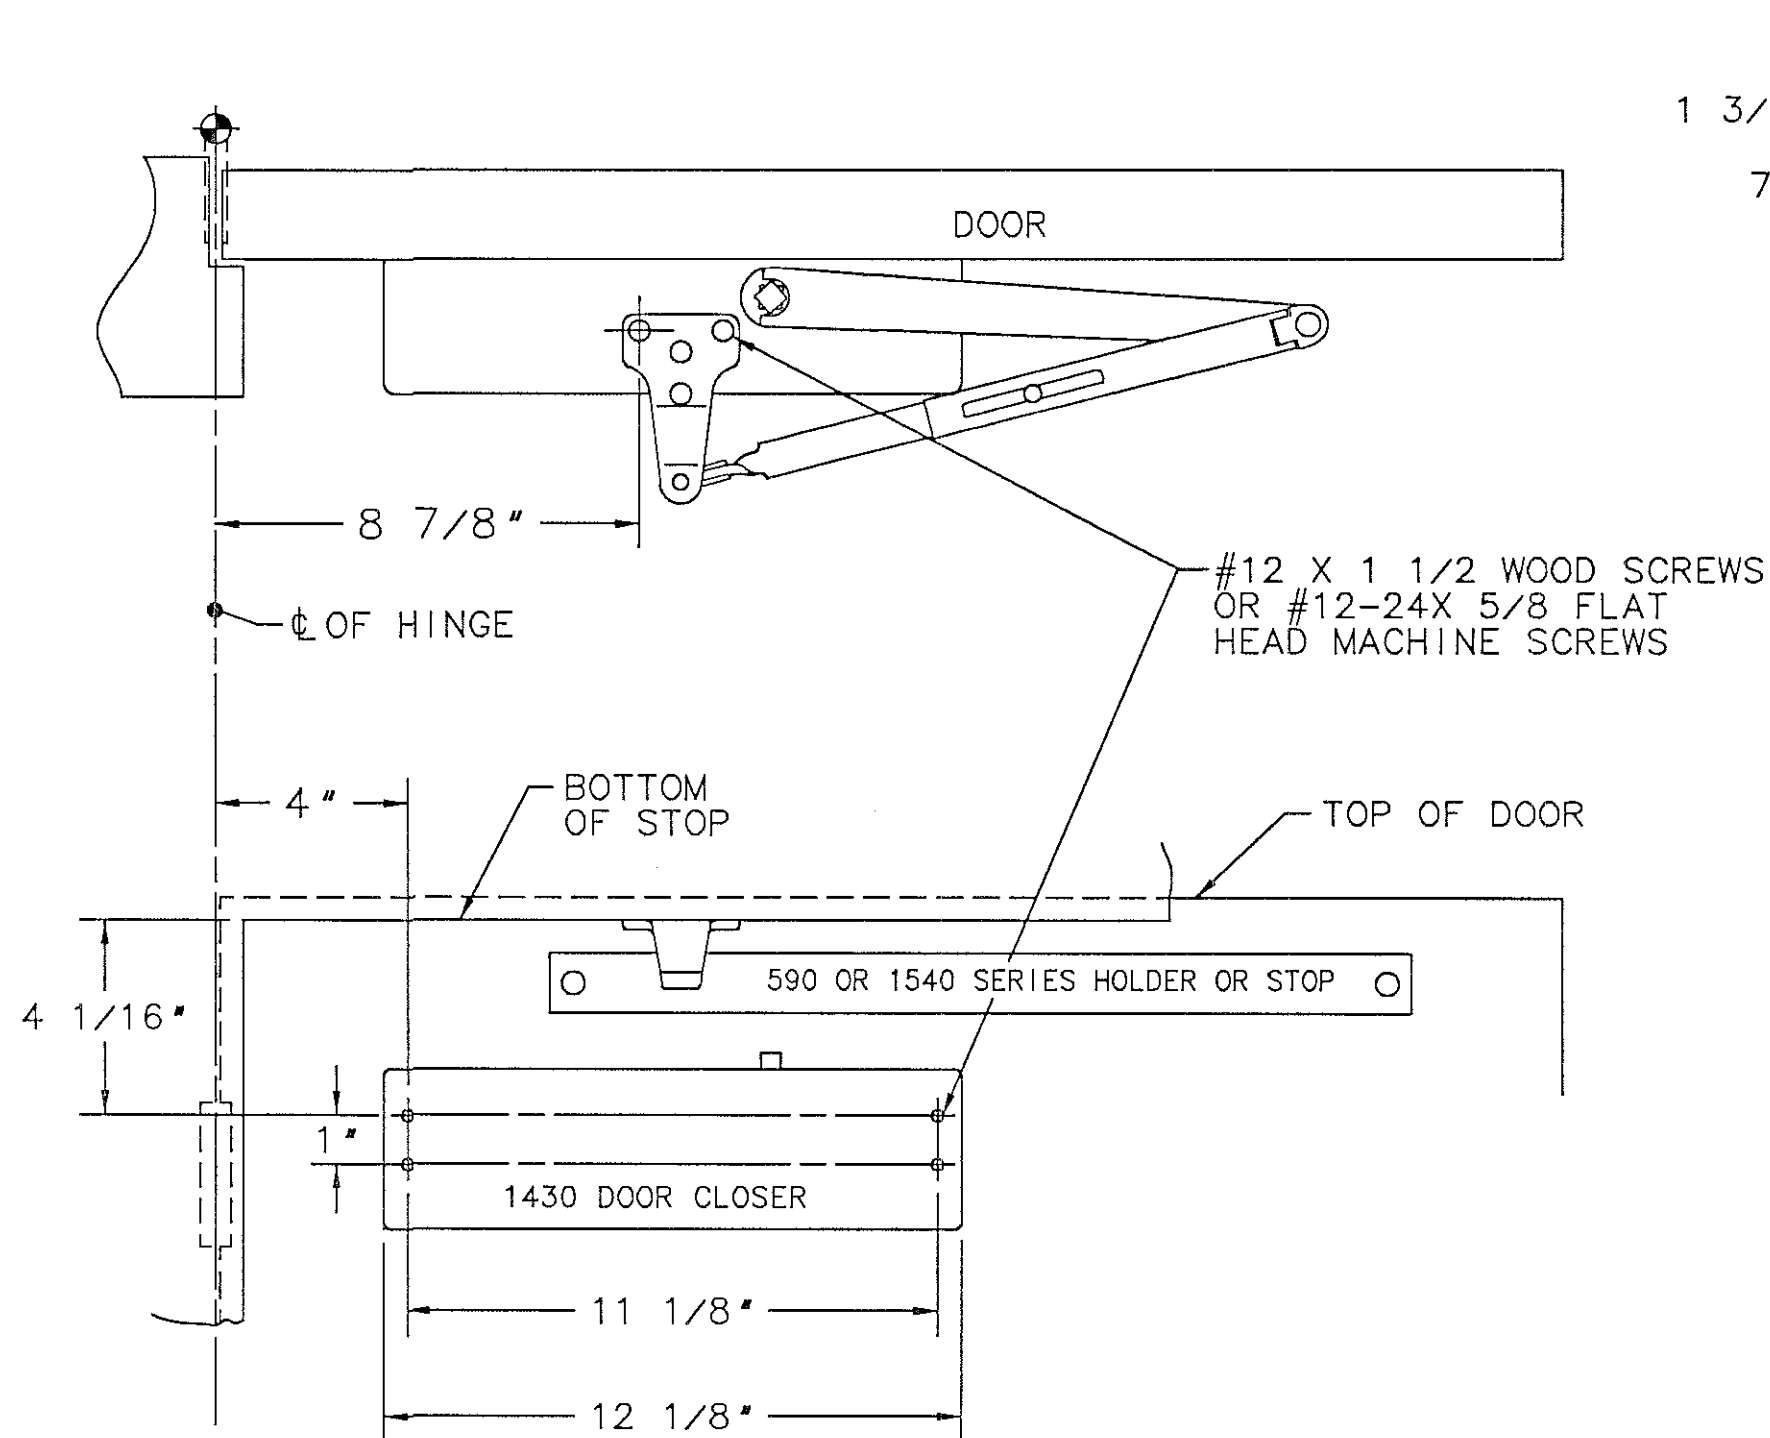

P3 BRACKET DETAIL

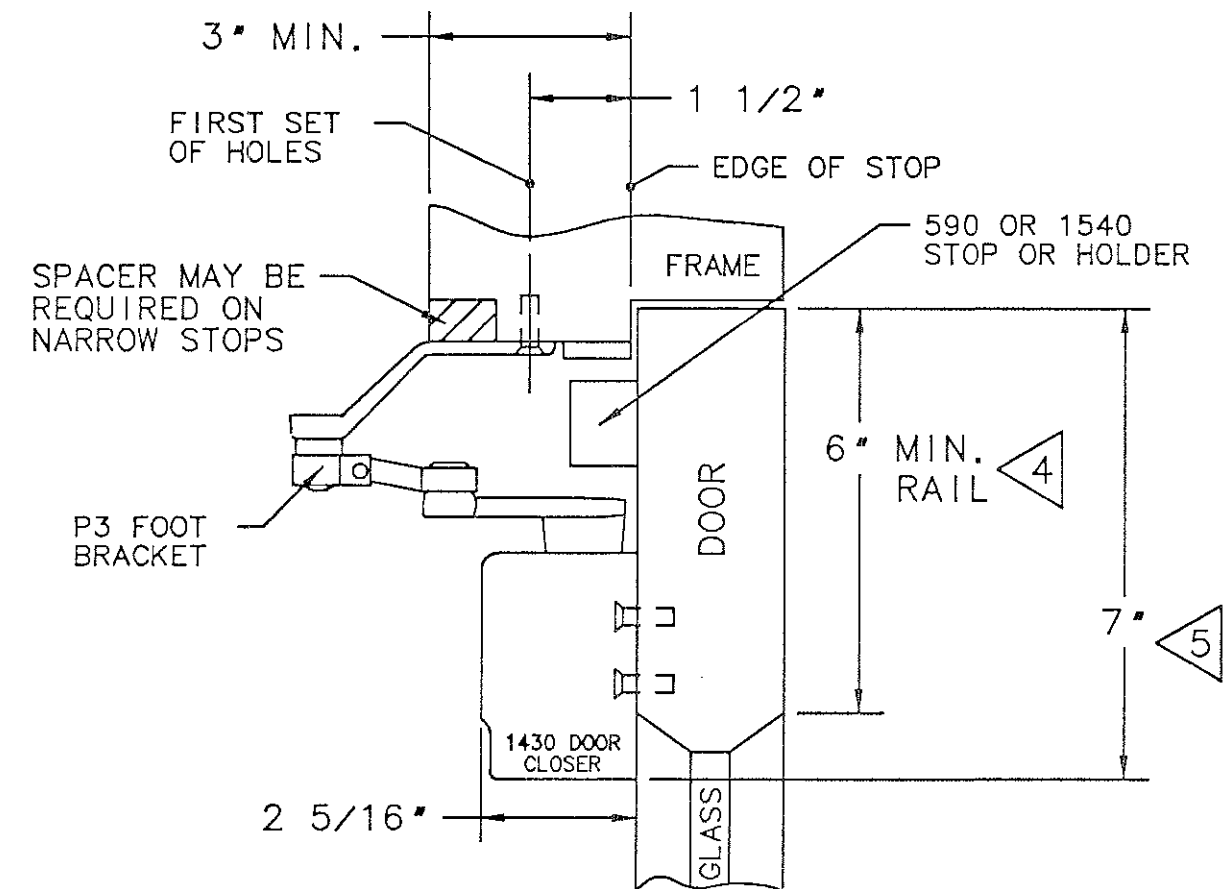

NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100 12 GAUGE RECOMMENDED.
2. FOR 597-599 INSTALLATION, SEE TEMPLATES A7479 - A7481
3. FOR 1546-1599 INSTALLATION, SEE TEMPLATES A7488 - A7490
4. FOR THIN RAIL DOORS, USE 1430-D DROP PLATE, SEE TEMPLATE A7168.
5. 1430-J PLATE MAY BE USED WHEN CLOSER IS VISIBLE THROUGH GLASS.
6. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET:
1430 SERIES CLOSER WITH
A P3 PARALLEL ARM & 1546-1549
OR 597-599 SERIES HOLDER/STOP

RELEASE DATE
APRIL 02
TEMPLATE NO.
A7554 B