



STOP/HOLDER MODEL NO.	DIM "A"	DIM "B"
697H & 697S	7"	12 1/8"
698H & 698S	5"	10 1/8"
699H & 699S	7"	12 1/8"

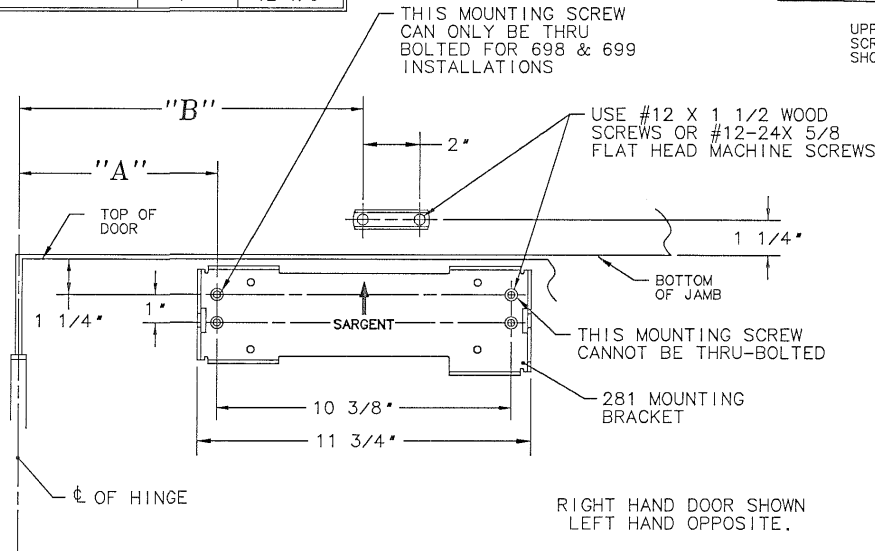


NOTES:

1. INSTALL 690 HOLDER/STOP BEFORE CLOSER.
2. FOR THIN TOP RAIL DOORS, USE 281-D DROP BRACKET, SEE TEMPLATE A7244.
3. FOR 697-699 INSTALLATION, SEE TEMPLATES A7482 - A7484
4. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 AND SDI-100 STANDARDS, 12 GAUGE RECOMMENDED.
5. 281-J COVER PLATE MAY BE USED WHEN CLOSER IS VISIBLE THROUGH GLASS.

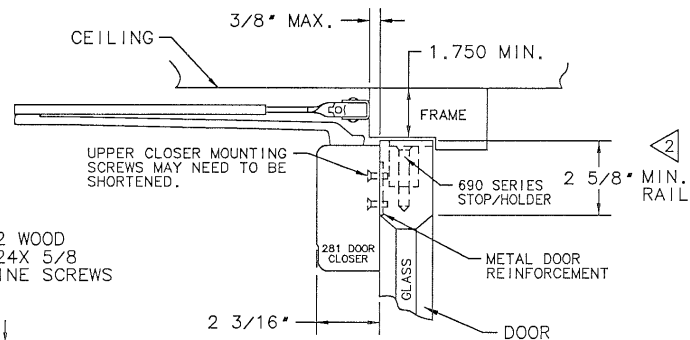

METAL DOOR INSTALLATION

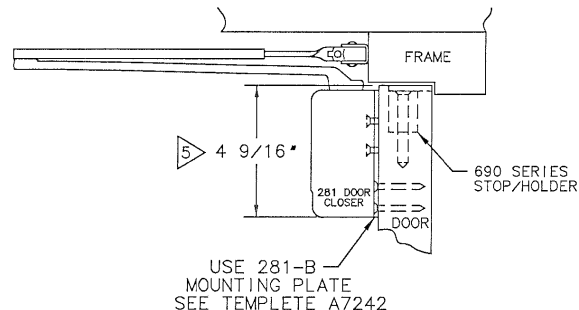

WOOD DOOR INSTALLATION

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET:
281 DOOR CLOSER WITH STANDARD
APPLICATION O ARM & 697-699
SERIES HOLDER OR STOP

EFFECTIVE DATE
APR. 02
TEMPLATE NO.
A7513 B