

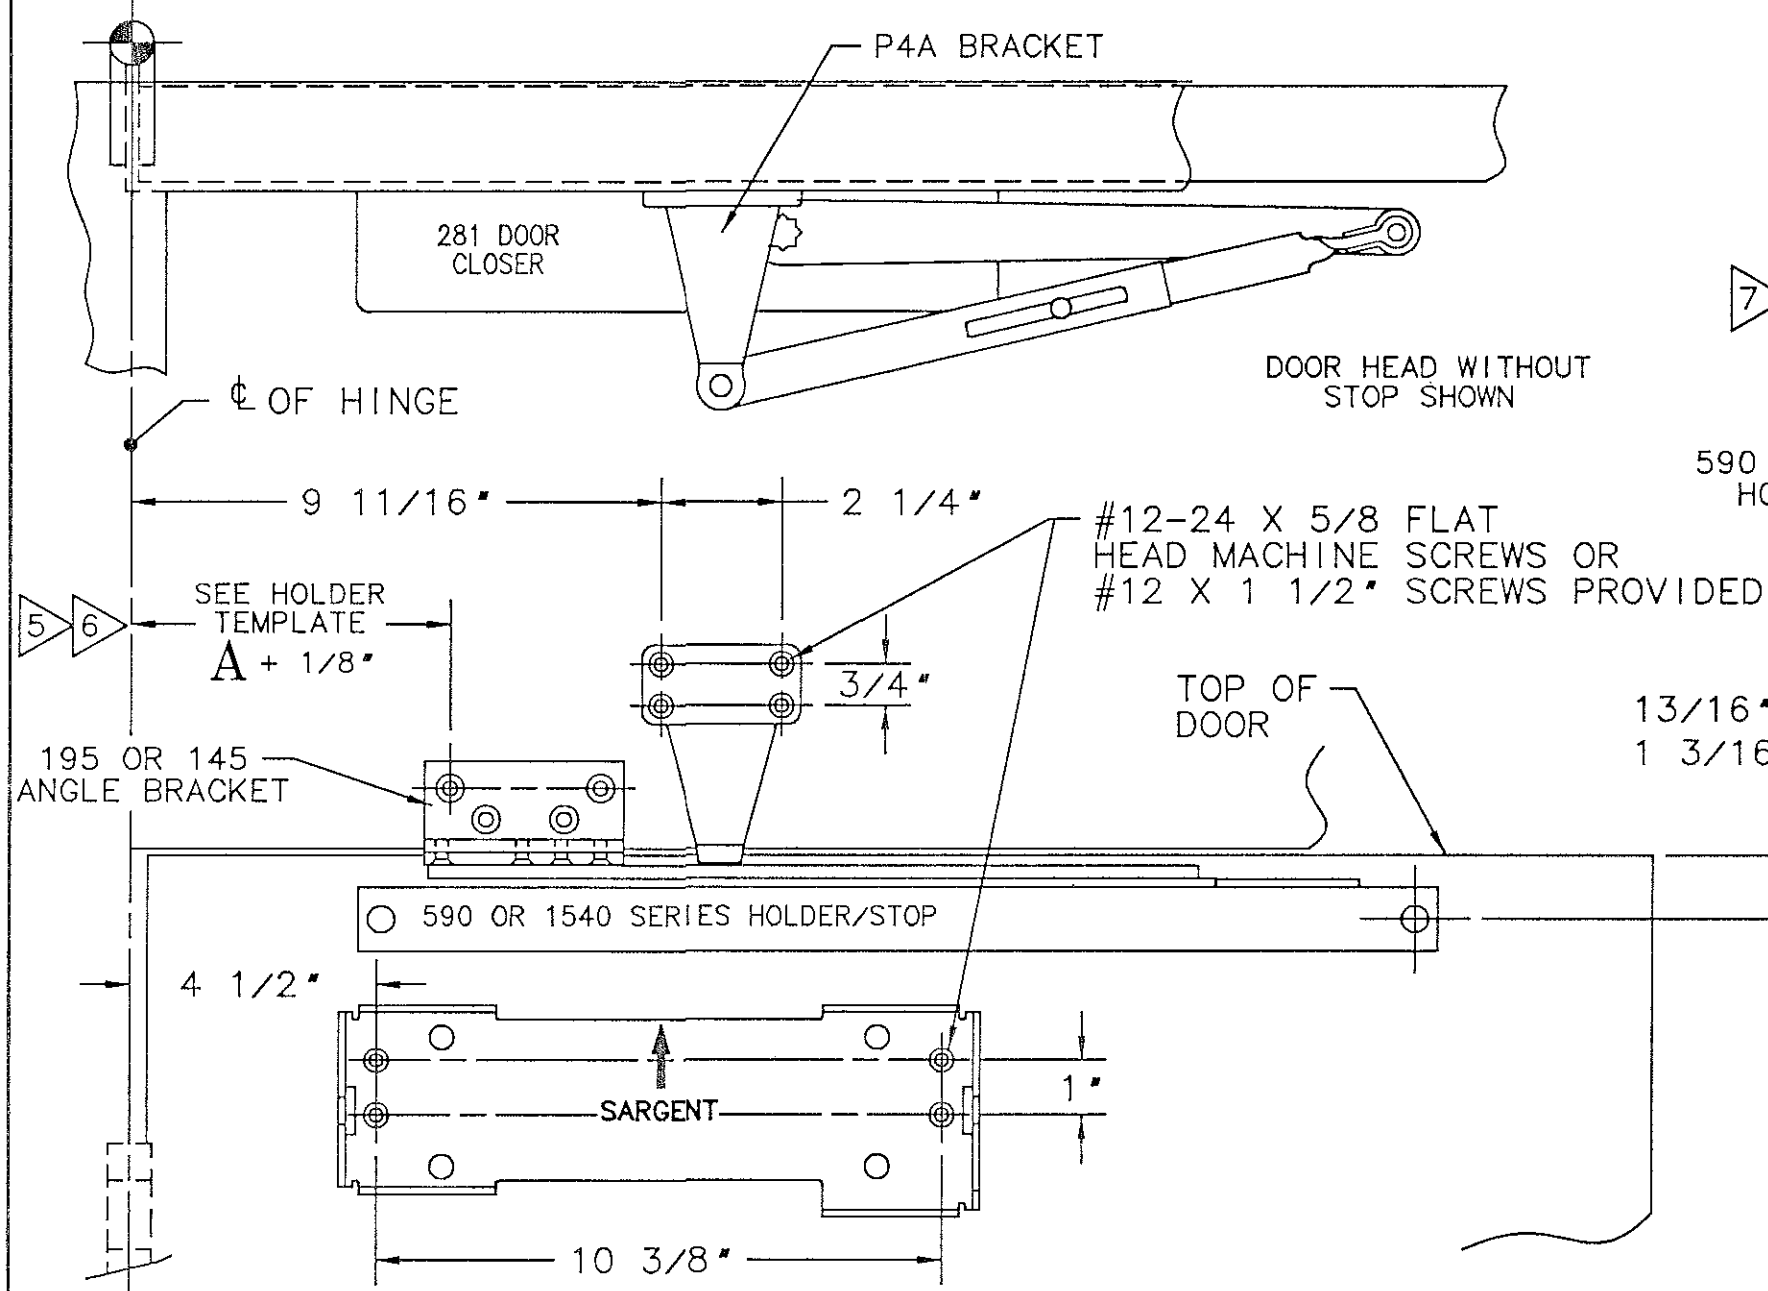


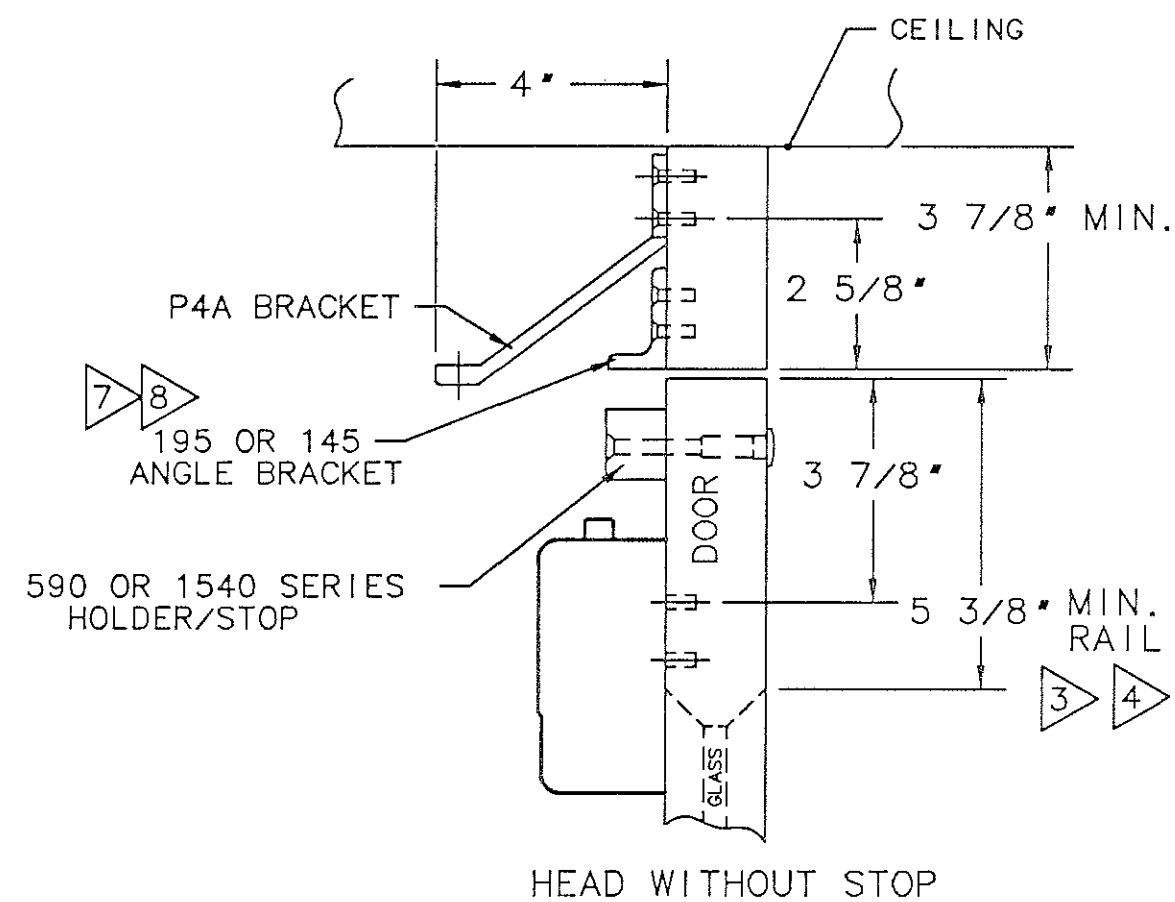

NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.
3. THE 281-J COVER PLATE MAY BE USED WHEN CLOSER IS VISIBLE THROUGH GLASS.
4. FOR NARROW RAIL DOORS, USE 281-D DROP PLATE, SEE TEMPLATE A7244.
5. FOR 597 - 599 INSTALLATION, SEE TEMPLATES A7479 - A7481
6. FOR 1546 - 1549 INSTALLATION, SEE TEMPLATES A7488 - A7490.
7. THE 195 BRACKET IS USED ONLY WITH 590 INSTALLATIONS, SEE TEMPLATE A5715.
8. THE 145 BRACKET IS USED ONLY WITH 1540 INSTALLATIONS, SEE TEMPLATE A5751.

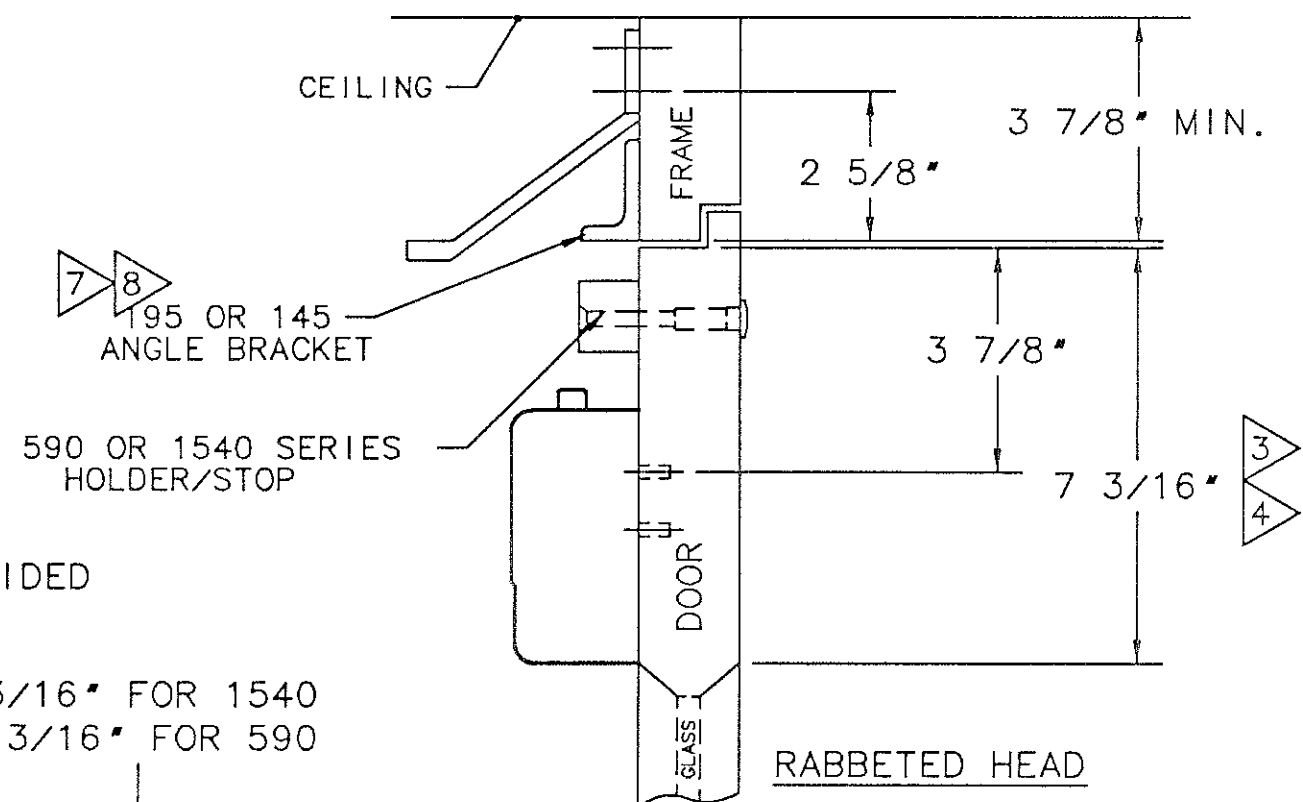

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 281 SERIES CLOSER
WITH P4A ARM AND 597-599 OR
1546-1549 SERIES HOLDER/STOP
(FLUSH FRAME CONDITION)

RELEASE DATE
12 JULY 02
TEMPLATE NO.
A7521 A