

A.N.S.I. 161 DOOR PREPARATION OR 2 1/8" THRU HOLE WHEN 28-K-HTB TRIM IS USED.
A.N.S.I. 161 DOOR PREPARATION IS OPTIONAL WHEN 28-D-GTB OR 28-E-GTB ARE USED.

ATTENTION:
DO NOT DRILL OR TAP HOLES
WHEN -HTB OR -GTB OUTSIDE TRIM
IS USED, SEE OUTSIDE TRIM TEMPLATE.

LOCATE, DRILL &
TAP THESE HOLES
WHEN APPLYING
HARDWARE TO DOOR.

☒ OF CHASSIS

#10-24 TAPPED HOLES
(6 PLACES)

SEE NOTE 6

2 1/8"

1 7/8"


4 1/4"

☒ OF
PUSH RAIL


1 5/8"
TYP

41" FROM FINISHED
FLOOR TO ☒ OF
PUSH RAIL, OR VARIES
DEPENDING ON ANSI
DOOR PREPARATION.

INSIDE FACE OF DOOR

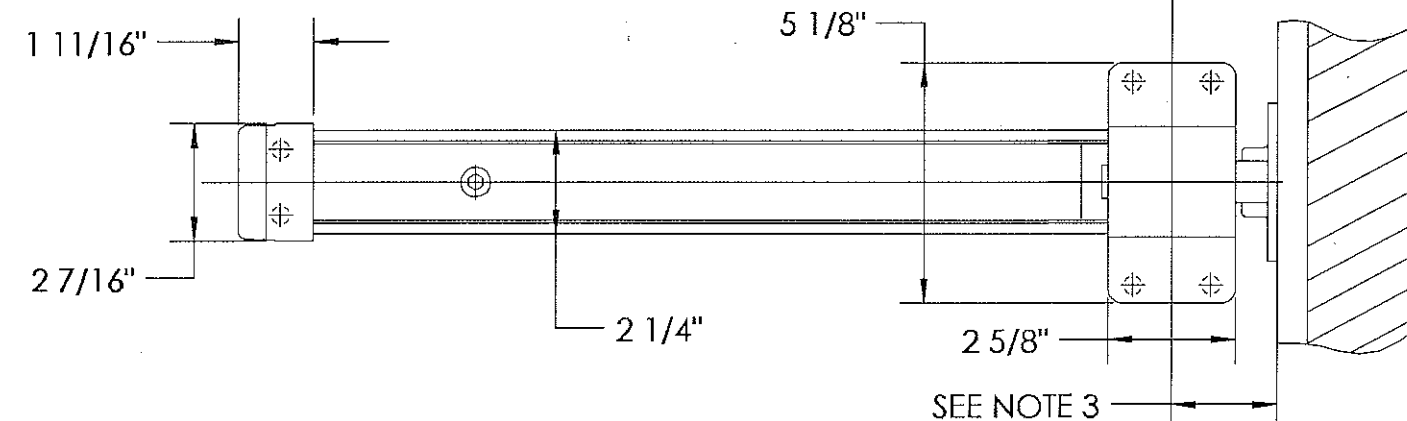

2828 SERIES

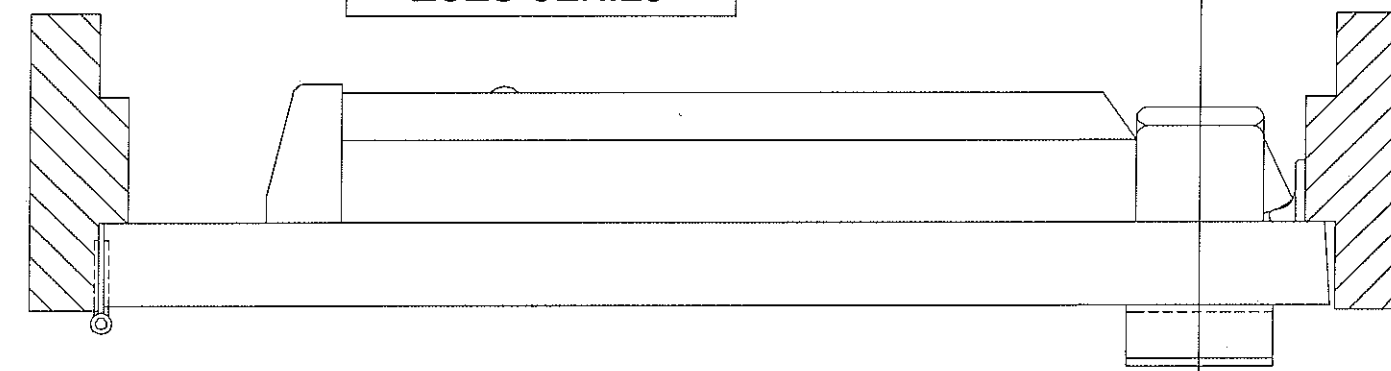

3828 SERIES

- ⑥ — SEE TEMPLATE NO. 4569 FOR ELECTROLYNX DETAILS WHEN NEEDED.
- ⑤ — SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED MUST BE FLUSH.
- ④ — SEE MASTER SHEET No. 4019 FOR AREAS REQUIRING REINFORCEMENTS.
- ③ — SEE STRIKE TEMPLATE FOR MOUNTING LOCATION OF STRIKE.
FOR 881 MONITOR STRIKE SEE TEMPLATE # 4386
- ② — WE RECOMMEND THAT ALL TAPPED HOLES BE DRILLED & TAPPED IN FIELD.
- ① — TOLERANCE ON ALL DIMENSIONS $\pm 1/32$ ".

SARGENT Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DOOR MANUFACTURERS TEMPLATE:
2828 & 3828
WITH -HTB AND -GTB PULL TRIMS

RELEASE DATE
31 JAN 06
TEMPLATE NO.
4287 E