
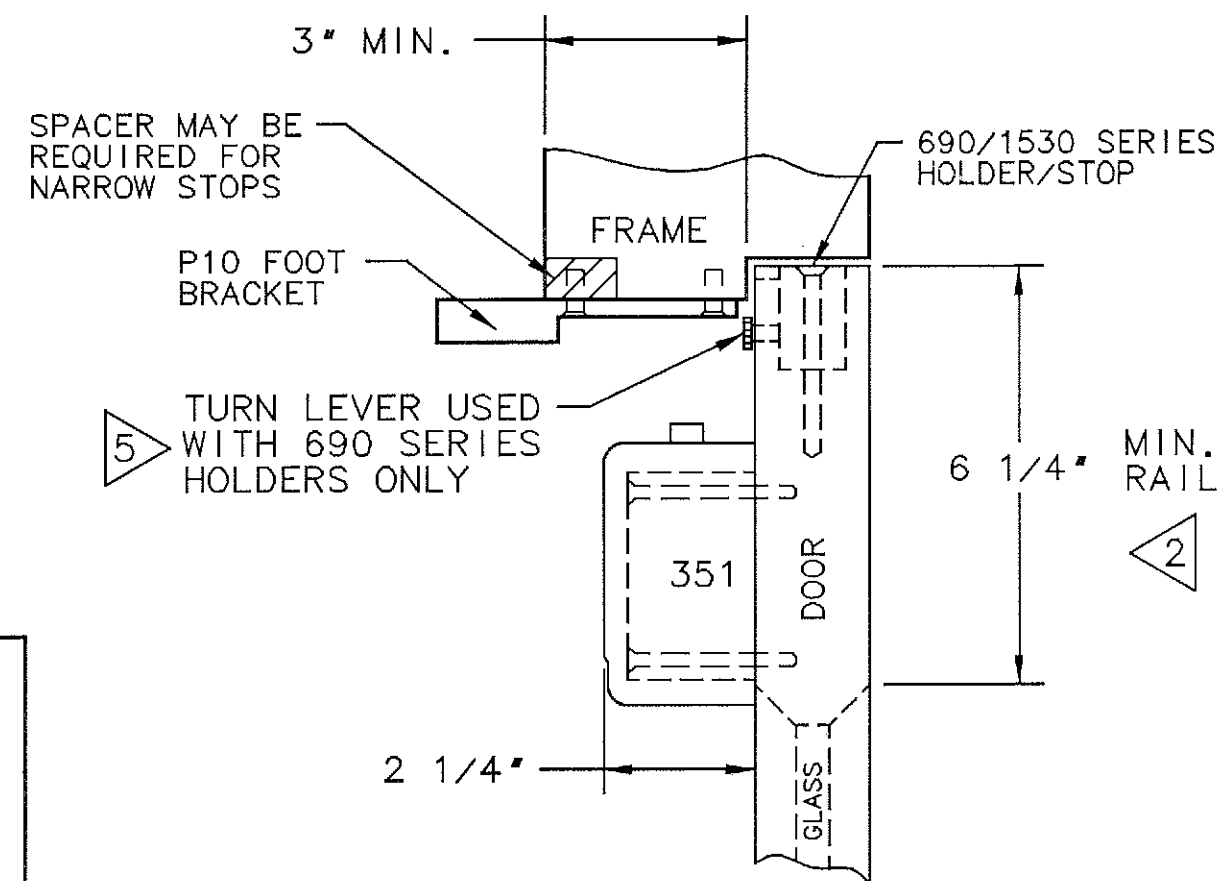
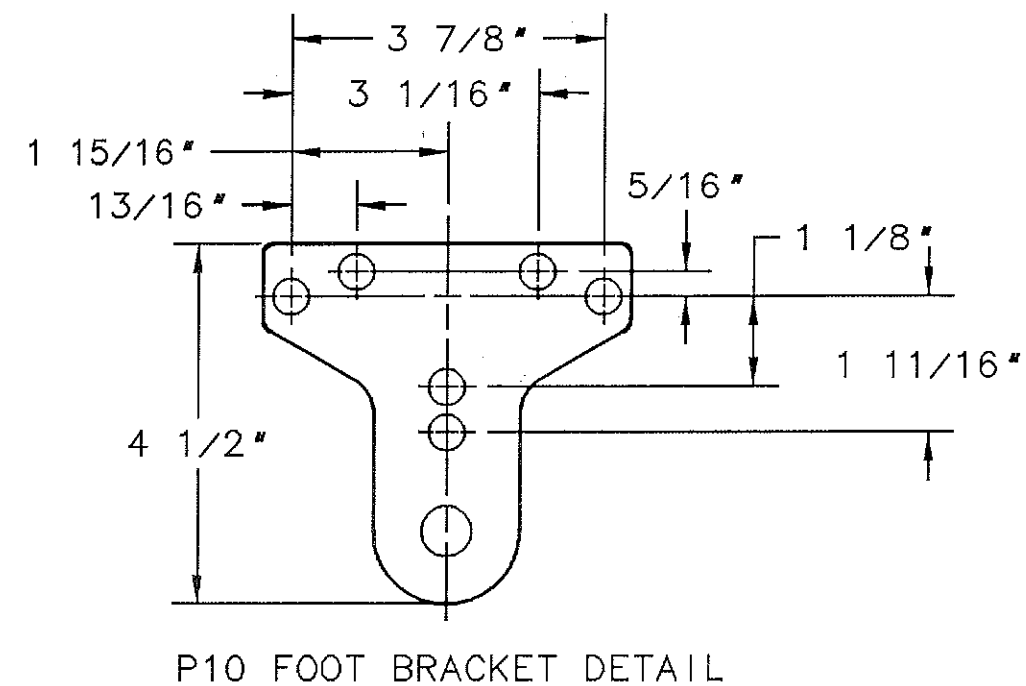


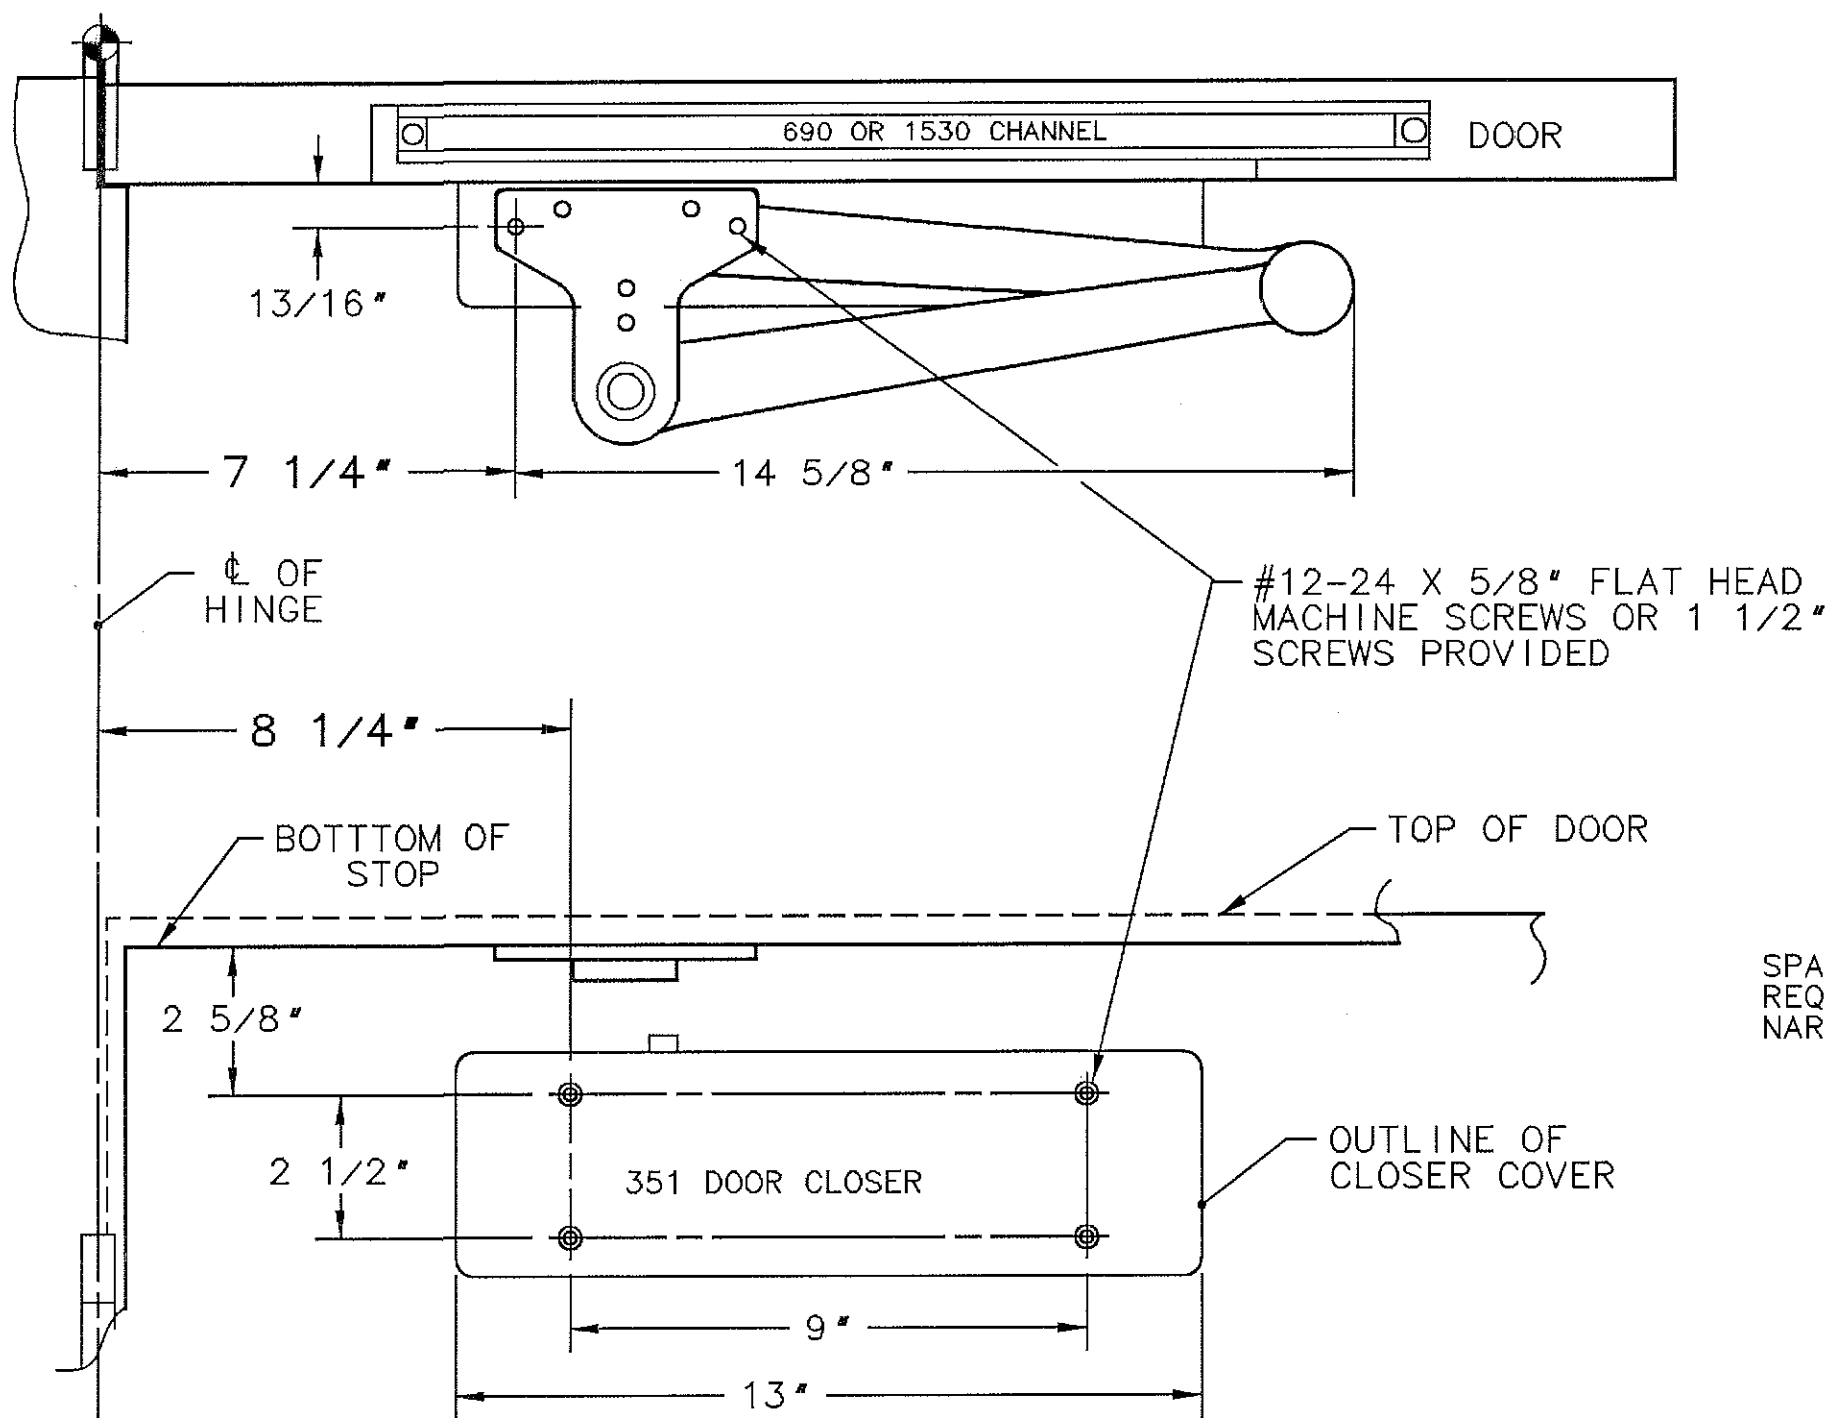

#### NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 AND SDI-100 STANDARDS, 12 GAUGE RECOMMENDED.
2. FOR THIN TOP RAIL DOORS, USE 351-D DROP PLATE, SEE TEMPLATE A6745
3. FOR 1536-1539 INSTALLATION, SEE TEMPLATES A7485 - A7487.
4. FOR 697-699 INSTALLATION, SEE TEMPLATES A7482 - A7484.
5. THE 690 TURN LEVER MAY BE INSTALLED ON EITHER SIDE OF DOOR.
6. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

**SARGENT® Manufacturing Company**  
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351 SERIES CLOSER WITH  
A P10 PARALLEL ARM & 697-699 OR  
1536-1539 SERIES HOLDER/STOP

RELEASE DATE  
*November 05*  
TEMPLATE NO.  
A7537 D