
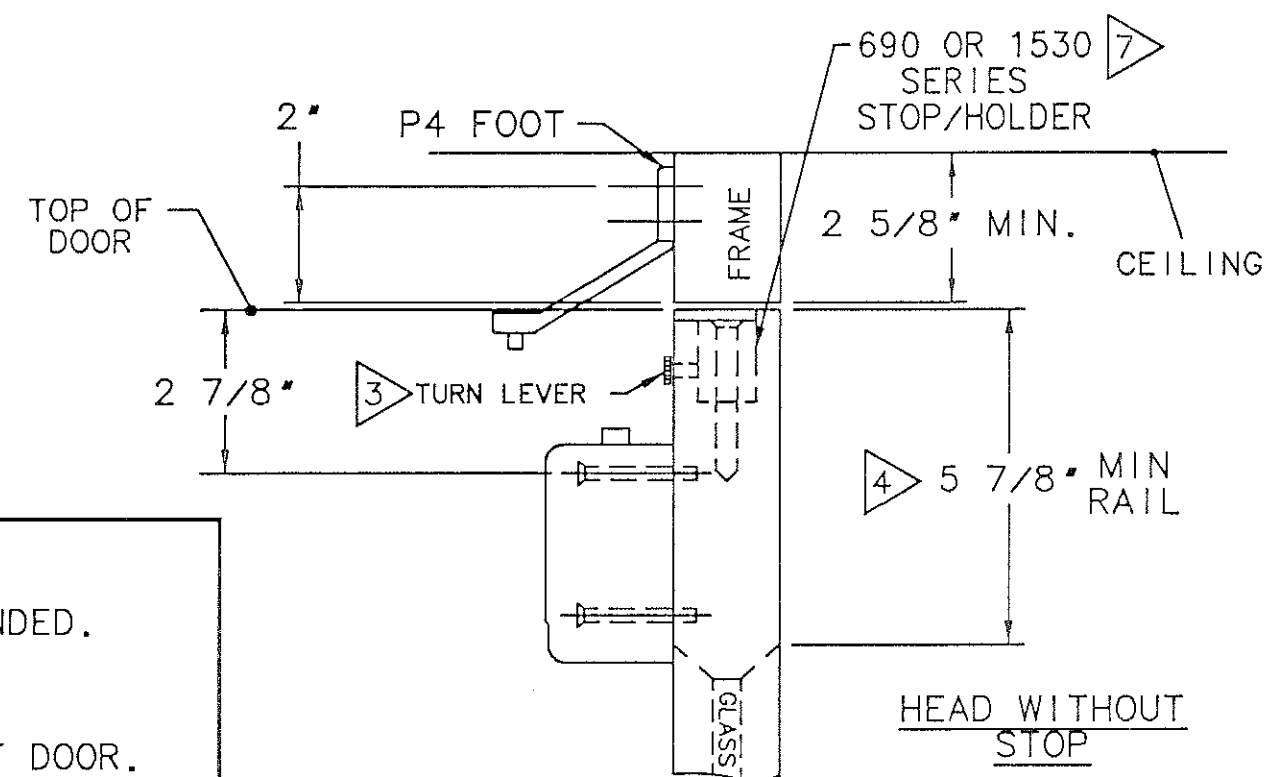
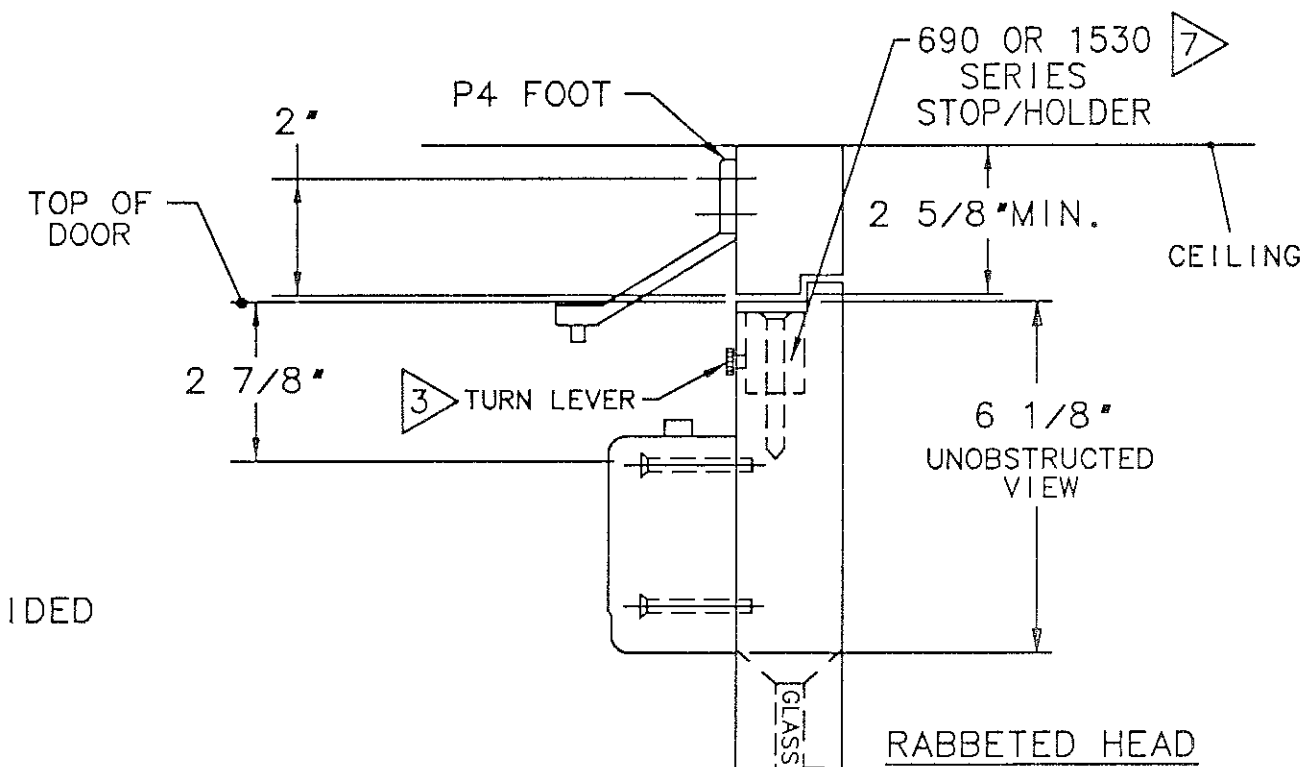


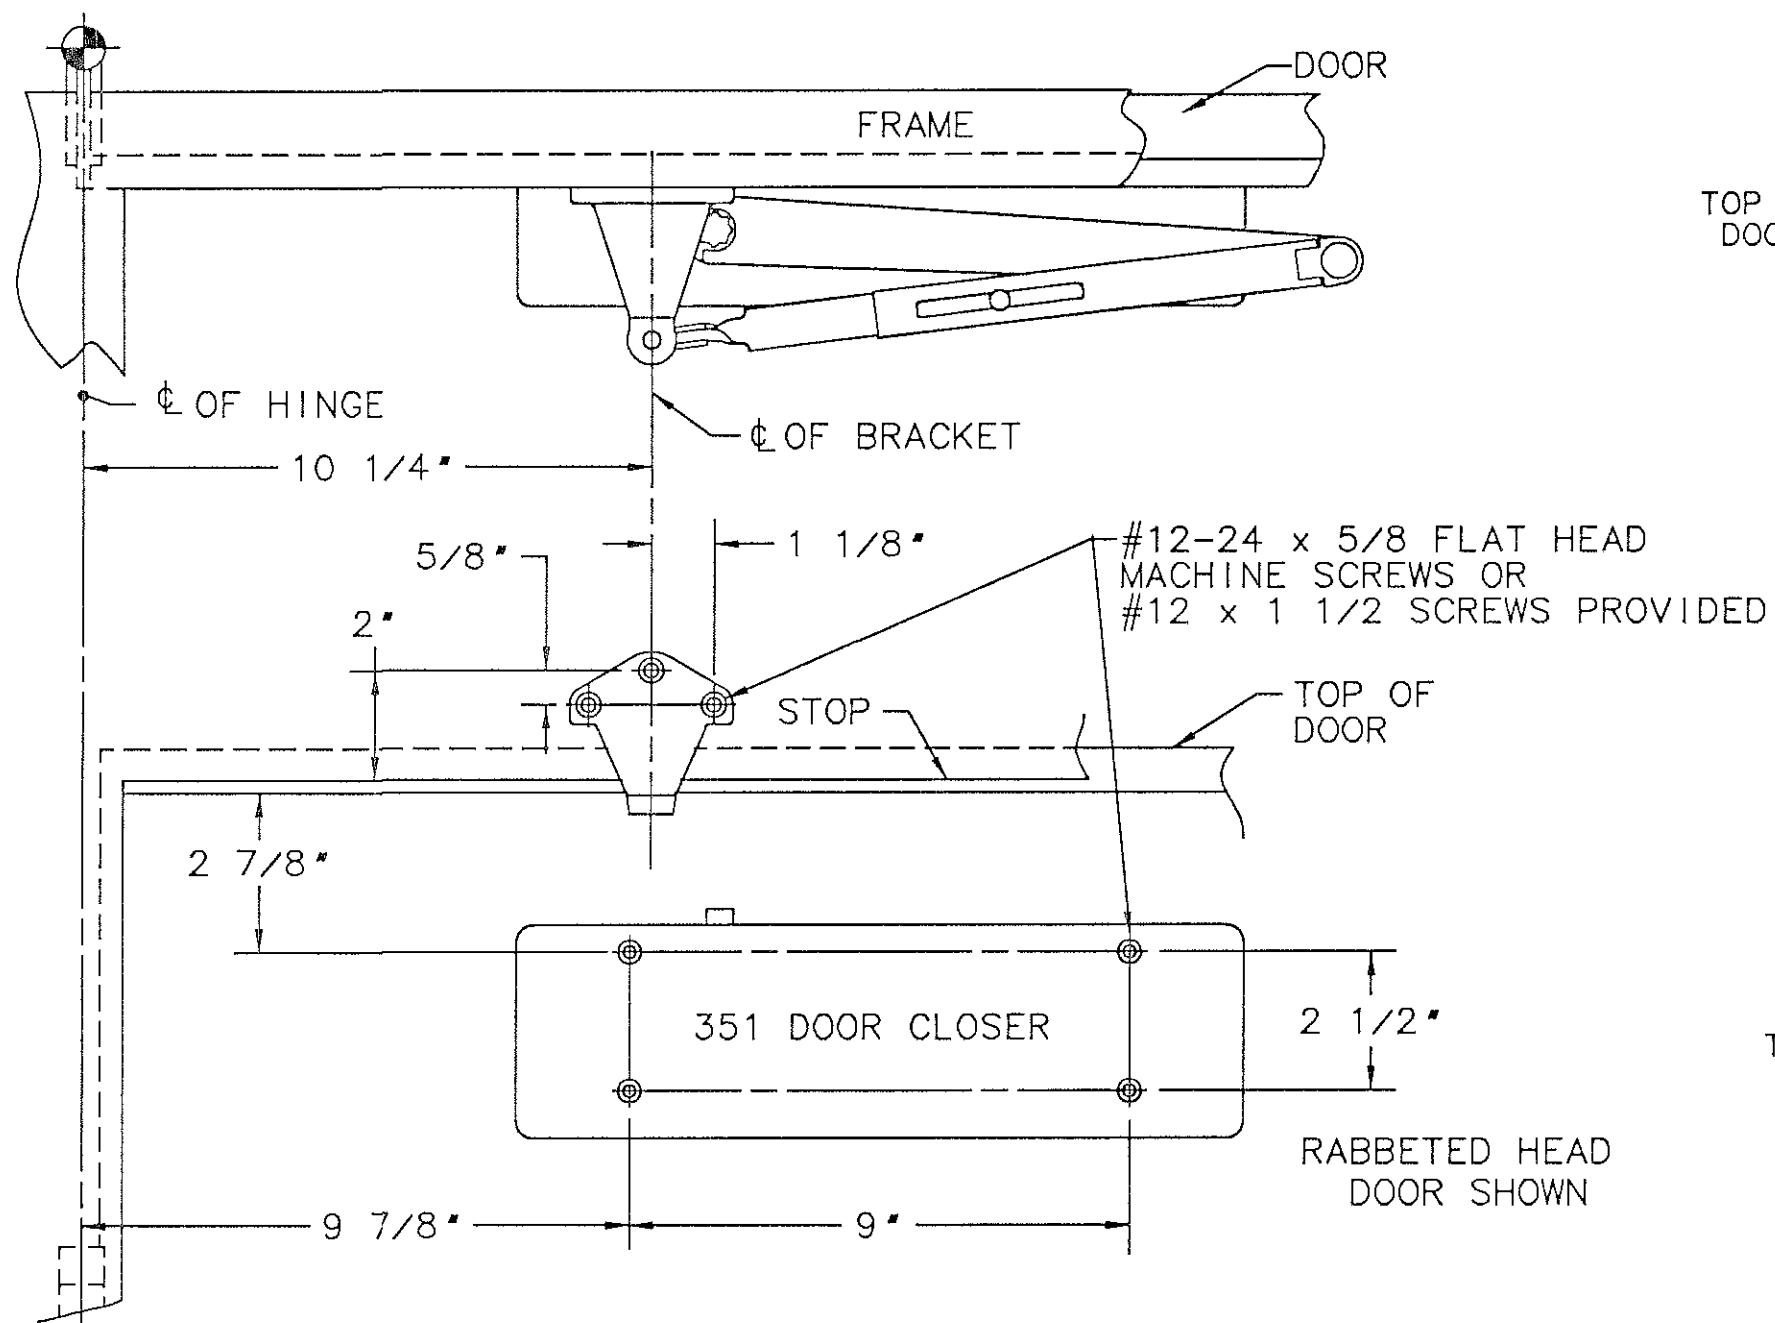

NOTES

1. REINFORCE METAL DOORS & FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.
3. TURN LEVER IS USED ON 690 HOLDERS ONLY & MAY BE INSTALLED ON EITHER SIDE OF DOOR.
4. FOR NARROW TOP RAIL DOORS, USE 351-D DROP PLATE, SEE TEMPLATE A6745.
5. FOR 697-699 INSTALLATION. SEE TEMPLATES A7482 - A7484.
6. FOR 1536-1539 INSTALLATION, SEE TEMPLATES A7485 - A7487.
7. THE 690 & 1530 CHANNEL & JAMB BRACKET MAY BE OFFSET 1/8" TO AVOID CONFLICT W/RABBET.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351 SERIES DOOR CLOSER
WITH P4 ARM & 697-699 OR 1536-1539
HOLDER/STOP (FLUSH FRAME CONDITION)

RELEASE DATE
12 JULY 02
TEMPLATE NO.
A7541A