

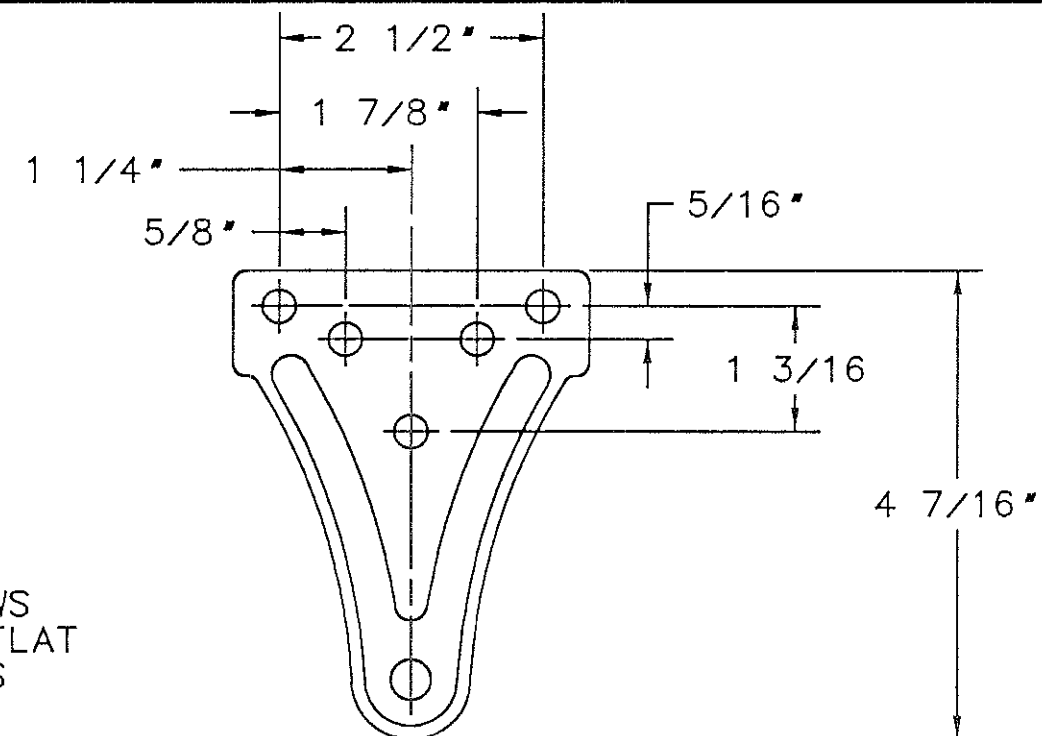


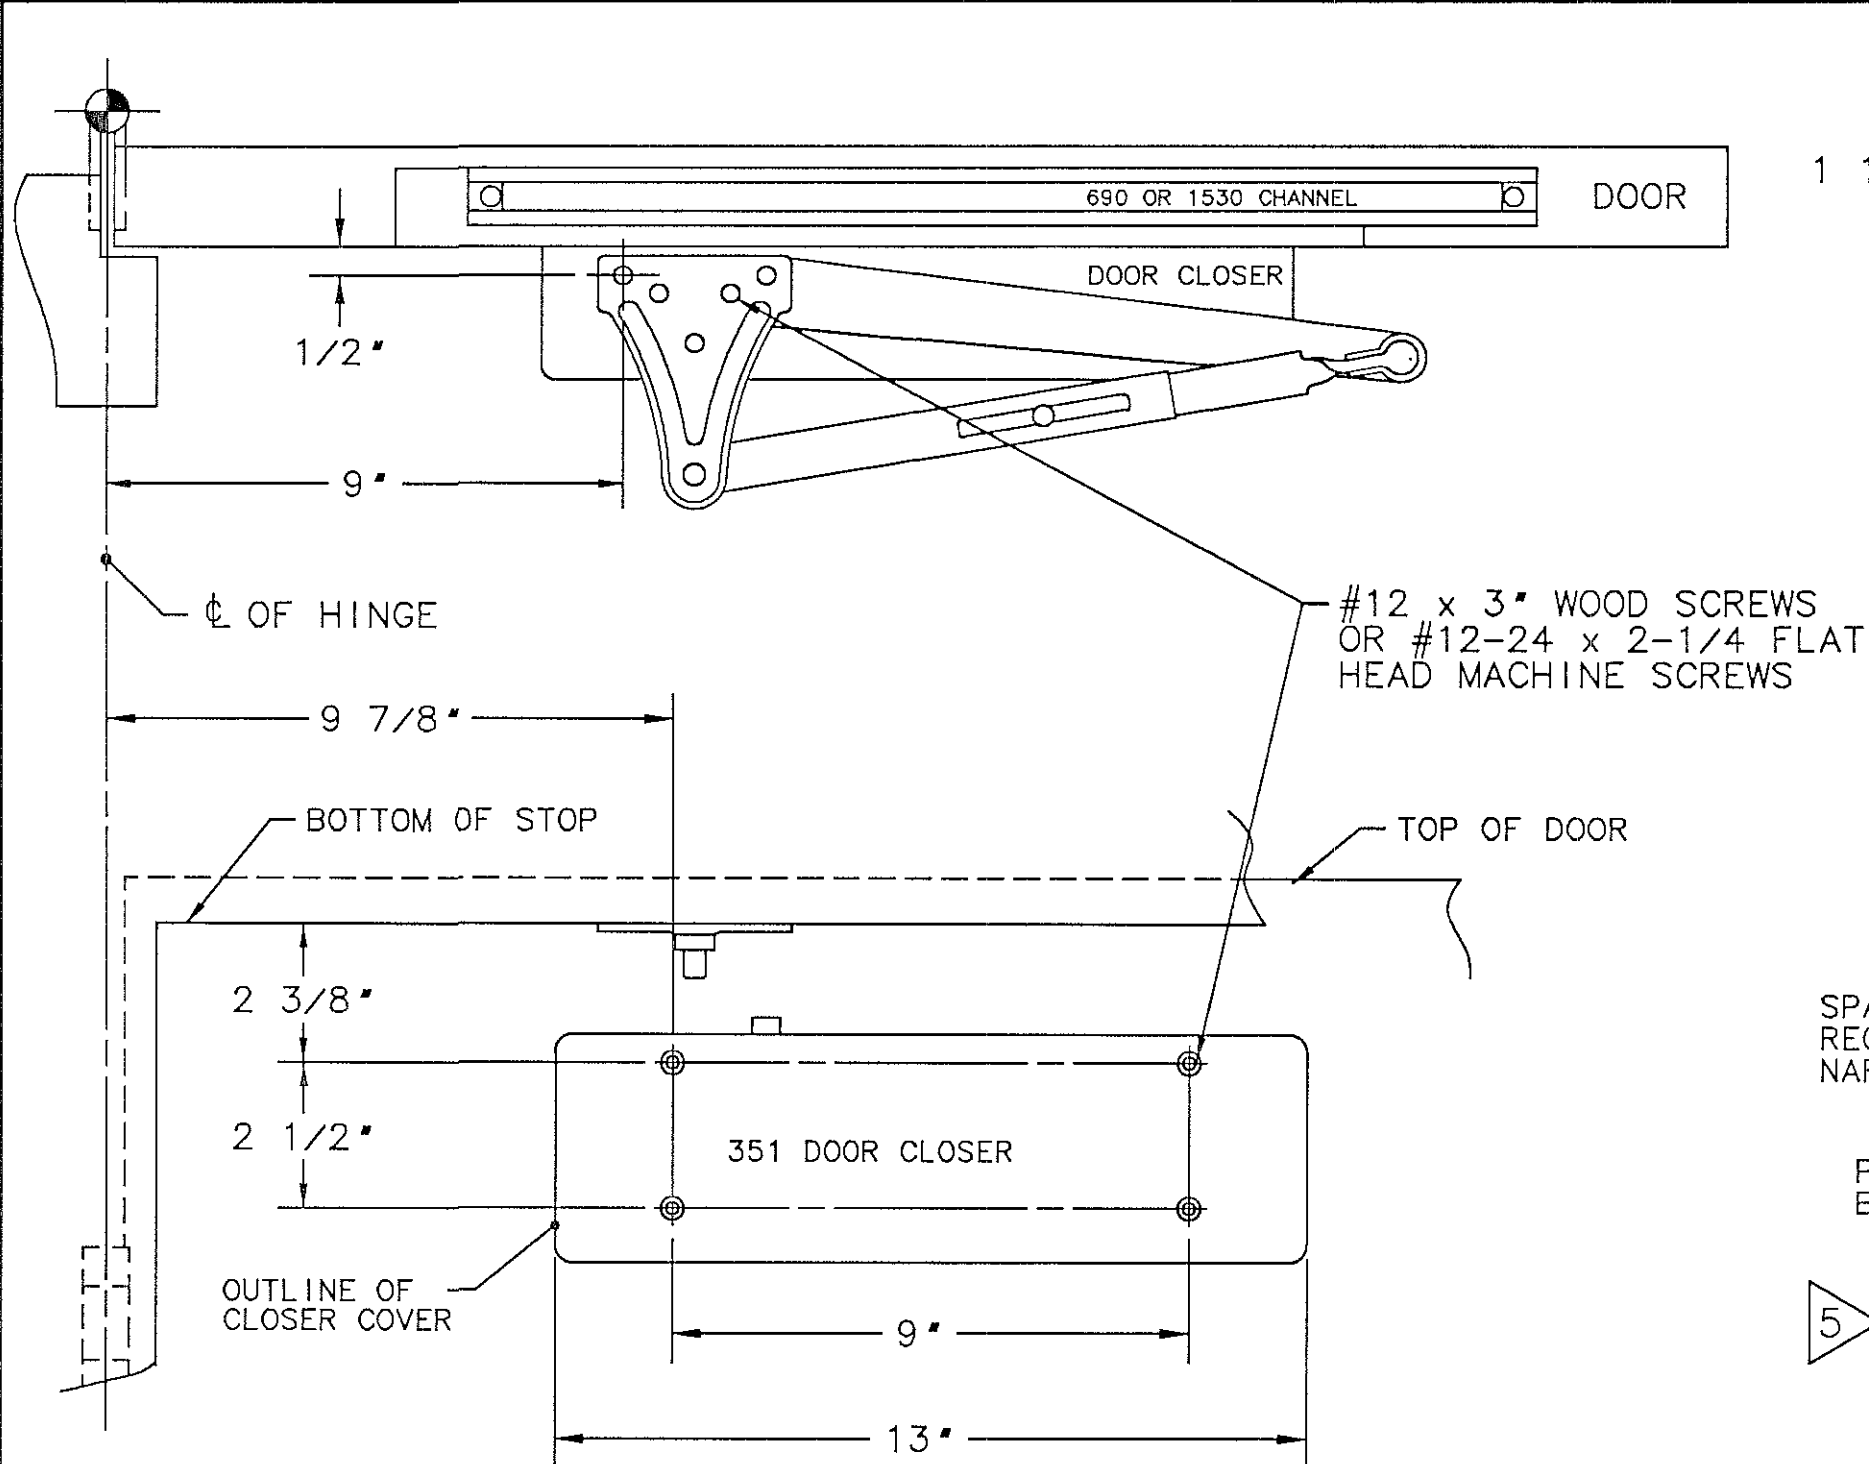

P9 FOOT BRACKET DETAIL

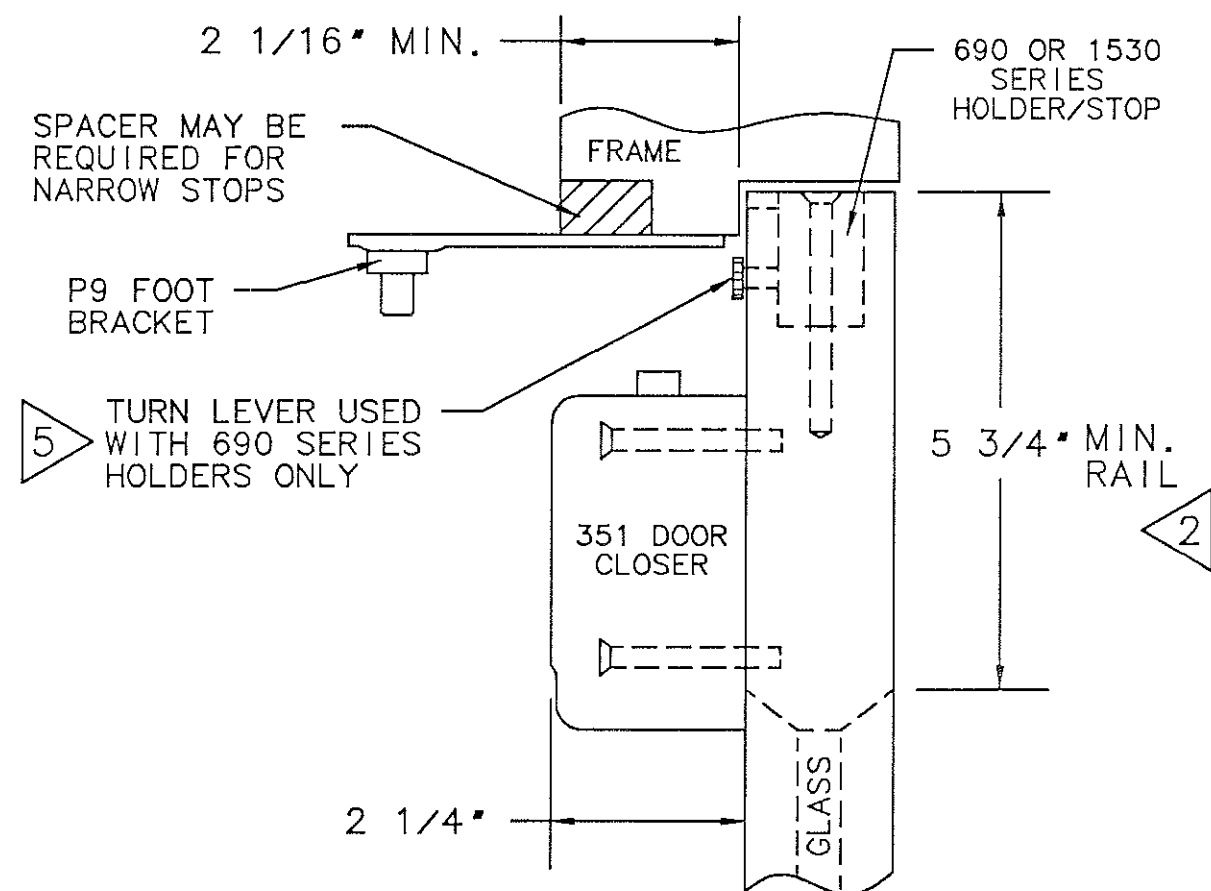

NOTES:

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. FOR THIN TOP RAIL DOORS, USE 351-D DROP PLATE, SEE TEMPLATE A6745.
3. FOR 697-699 INSTALLATION, SEE TEMPLATES A7482 - A7484.
4. FOR 1536-1539 INSTALLATION, SEE TEMPLATES A7485 - A7487.
5. THE 690 TURN KNOB MAY BE INSTALLED ON EITHER SIDE OF DOOR.
6. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351 SERIES CLOSER
WITH P9, PARALLEL ARM & 1536-1539
OR 697-699 HOLDER/STOP

RELEASE DATE
APRIL 02
TEMPLATE NO.
A7535 B