


SEE DATA SHEET A7380 FOR BUTTS, OFFSET PIVOTS OR SWING CLEAR HINGES.

DEGREE OF DOOR OPENING AT "HOLD OPEN"

DIM. "A"	85°	90°	95°	100°	105°	110°
	12 3/16"	11 1/2"	10 13/16"	10 1/4"	9 3/4"	9 1/4"
DIM. "B"	11 1/16"	10 5/16"	9 11/16"	9 1/16"	8 5/8"	8 1/16"


NOTE: "DEAD STOP" OCCURS APPROX. 3° BEYOND "HOLD OPEN"

PSH TYPE ARM ASSEMBLY SHOW.
PS TYPE ARM SIMILAR

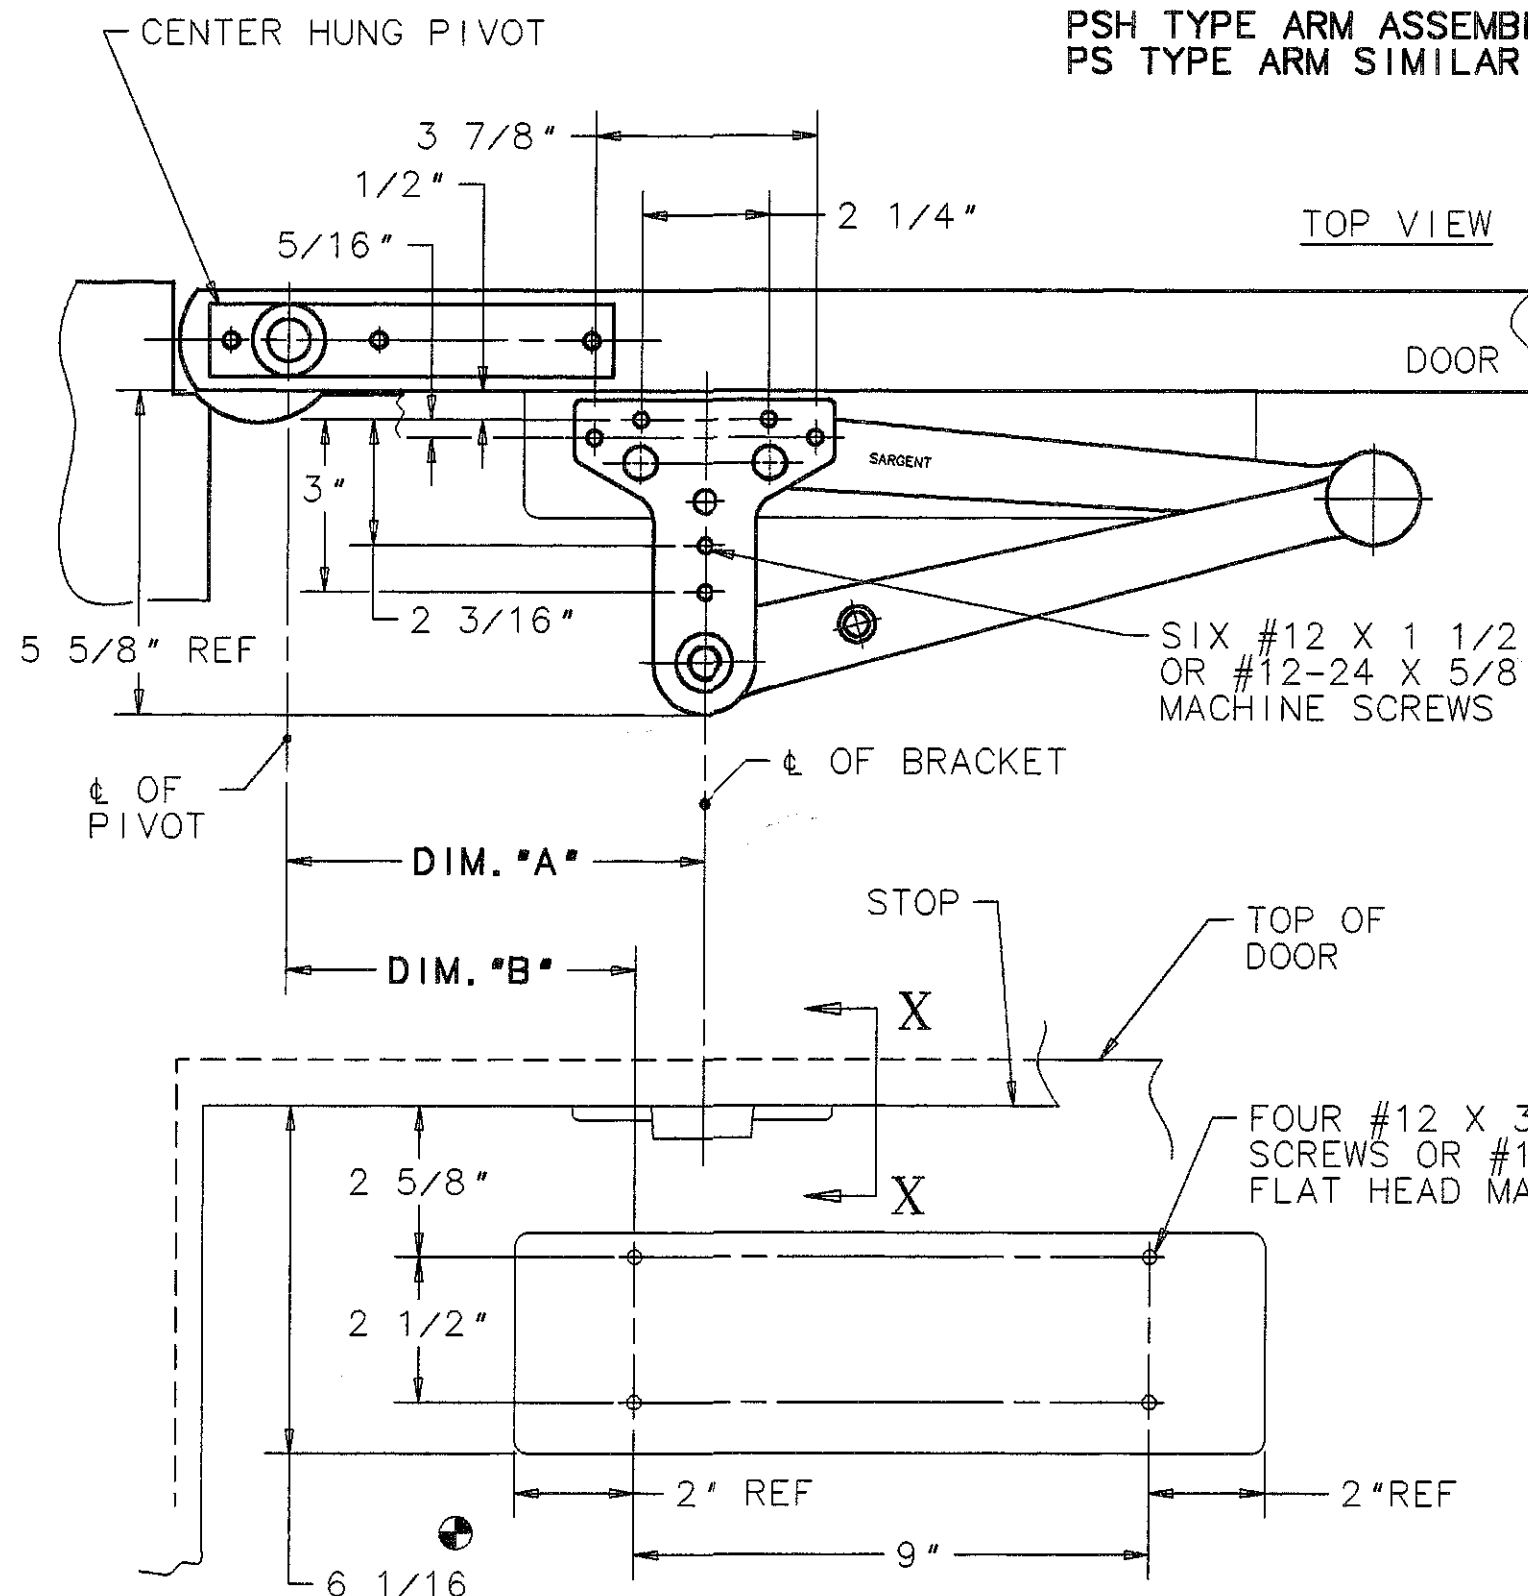

SIX #12 X 1 1/2" WOOD SCREWS
OR #12-24 X 5/8" FLAT HEAD
MACHINE SCREWS

SUITABLE SPACER (BY OTHERS)
MUST BE USED WHEN STOP IS
LESS THAN 3" IN WIDTH

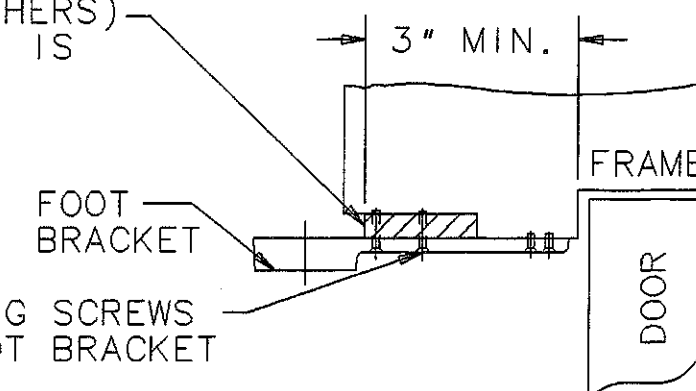


A MINIMUM OF FIVE MOUNTING SCREWS
MUST BE USED TO MOUNT FOOT BRACKET

SECTION X-X

A MINIMUM OF FIVE MOUNTING SCREWS
MUST BE USED TO MOUNT FOOT BRACKET

FOUR #12 X 3" WOOD
SCREWS OR #12-24 X 2 1/4"
FLAT HEAD MACHINE SCREWS

125-V BRACKET MUST BE USED
WHEN FRAME IS NARROW. USE
SARGENT'S 125-VF BRACKET
(NOT SHOWN) FOR FLUSH FRAME
CONDITIONS

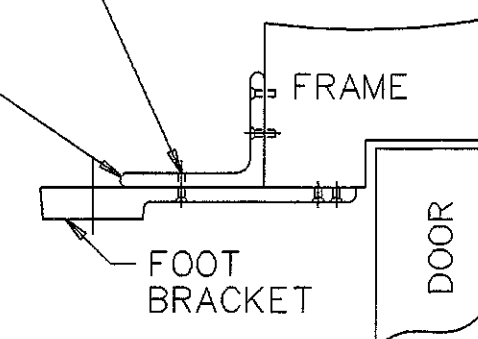

NOTES:

1. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.
2. 12 GAGE MIN. REINFORCEMENT REQUIRED FOR METAL DOORS AND FRAMES.
3. ⦿ SPACE REQUIRED TO MOUNT CLOSER ON TOP RAIL. IF SPACE IS LESS THAN SHOWN USE 351-D DROP PLATE. SEE DATA SHEET A6745 FOR DETAILS.

SARGENT MANUFACTURING COMPANY

NEW HAVEN, CONN. 06511

DATA SHEET:
351 SERIES CLOSERS PARALLEL
HEAVY DUTY ARM APPLICATIONS -
PS & PSH ARMS.CENTER HUNG PIVOT.

EFFECTIVE DATE
JANUARY, 00
TEMPLER NO. A7381 A