

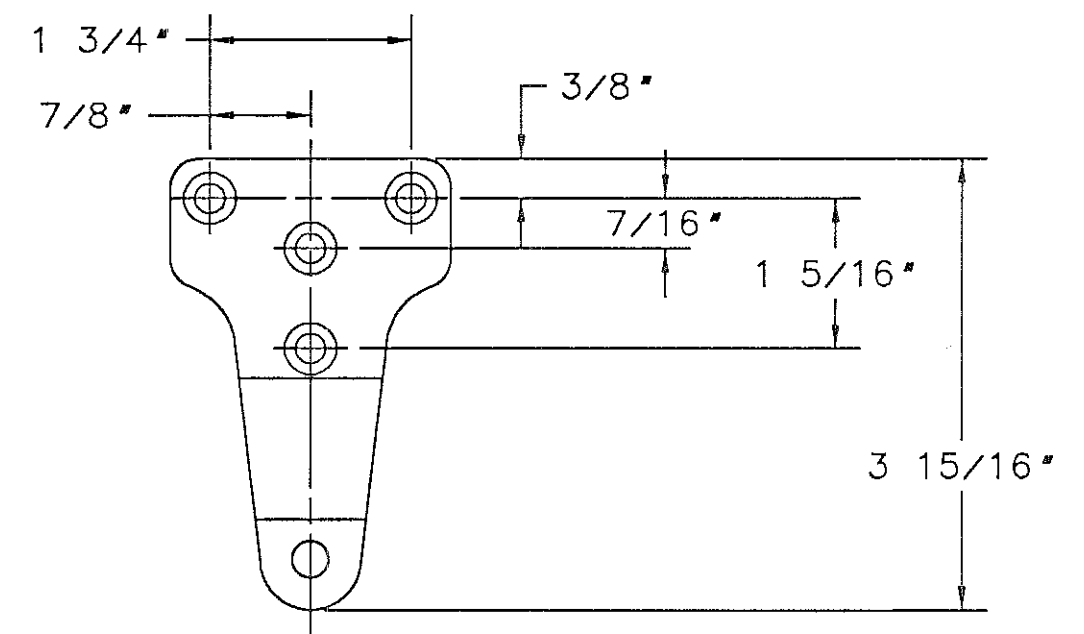


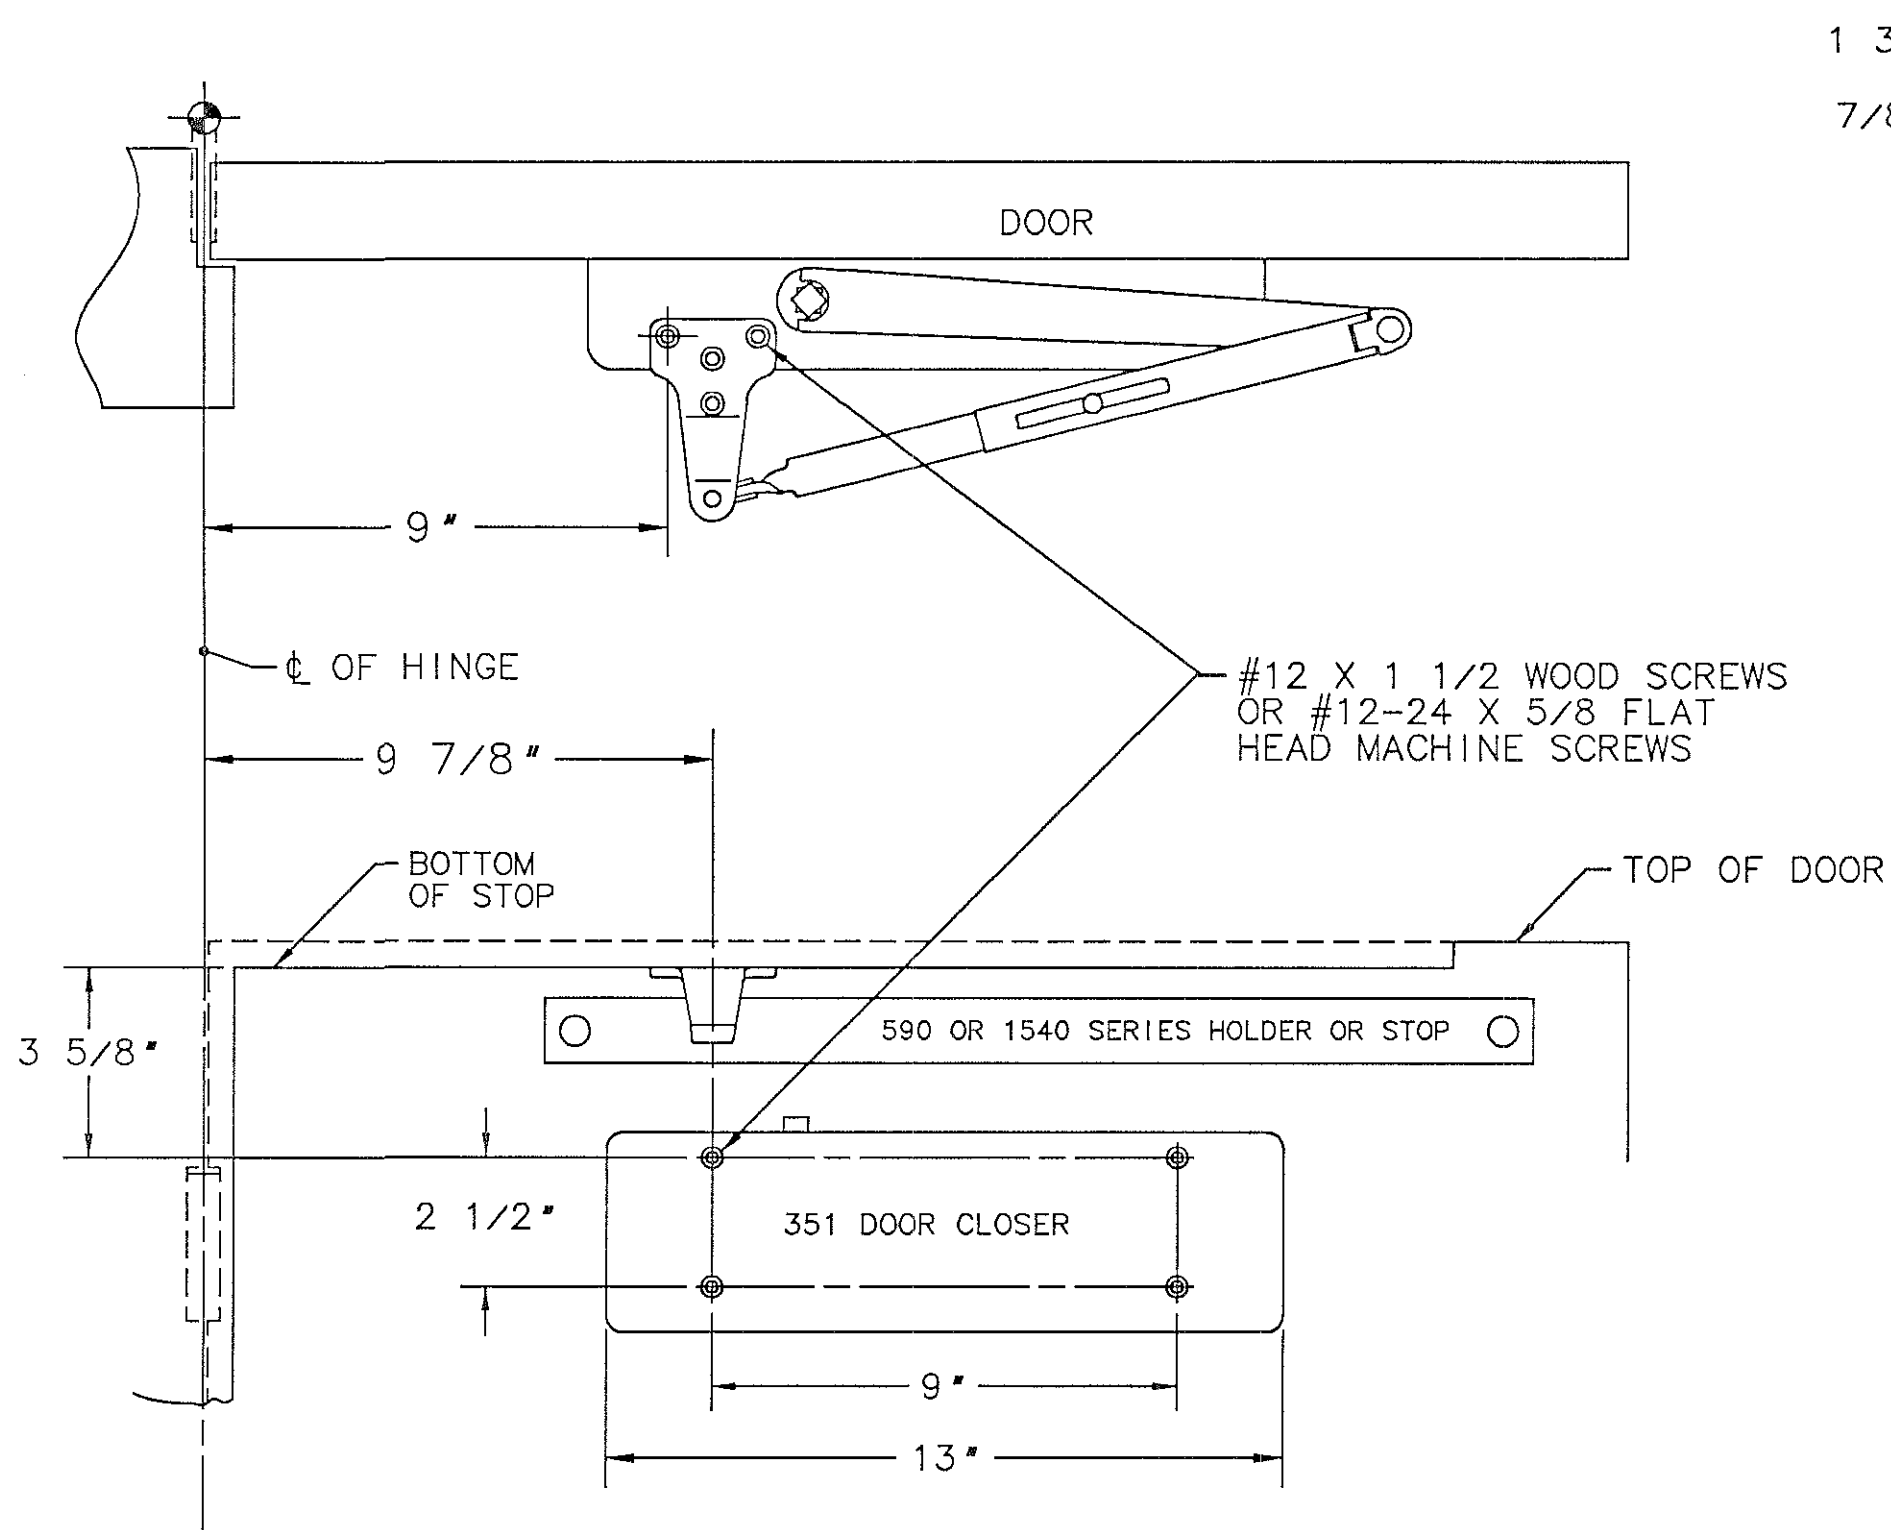

P3 BRACKET DETAIL

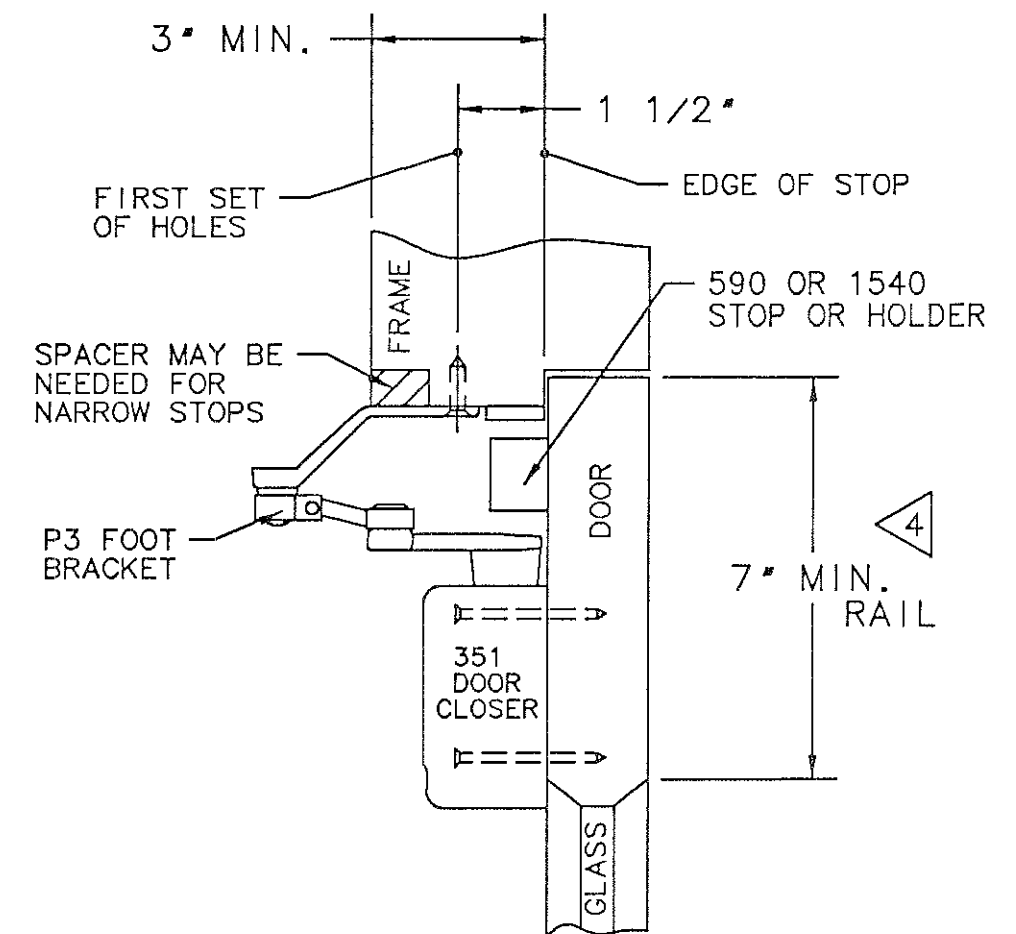

NOTES

1. REINFORCE METAL DOORS & FRAMES PER ANSI A250.8 AND SDI-100 STANDARDS, 12 GAUGE RECOMMENDED.
2. FOR 597-599 INSTALLATION, SEE TEMPLATES A7479 THROUGH A7481.
3. FOR 1546-1599 INSTALLATION, SEE TEMPLATES A7488 THROUGH A7490.
4. FOR THIN RAIL DOORS, USE 351-D DROP PLATE, SEE TEMPLATE A6745.
5. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351 CLOSER WITH A
P3 PARALLEL ARM & 1546-1549
OR 597-599 SERIES HOLDER/STOP

RELEASE DATE
APRIL 02
TEMPLATE NO.
A7536 B