


604 Rub Strip Installation Instructions



FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 / www.sargentlock.com

ASSA ABLOY, the global leader
in door opening solutions


Step 1: (Note: 657 Strike must be installed before proceeding with 604 Rub Strip installation.) Measure the distance between the front face of the strike and the front face of the door frame.

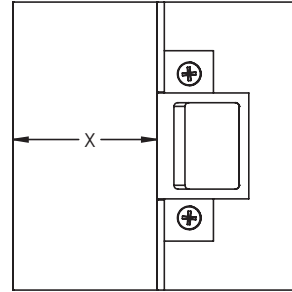

Step 2: Using this measurement, cut the 604 Rub Strip to the length needed.

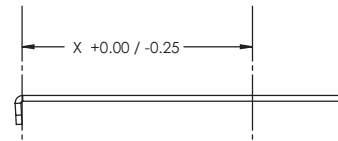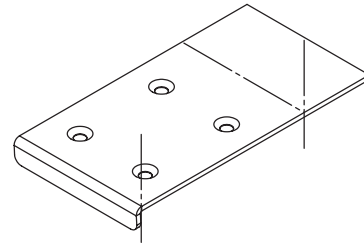

Step 3: Drill and tap four #6-32 holes into the door frame in the locations shown.

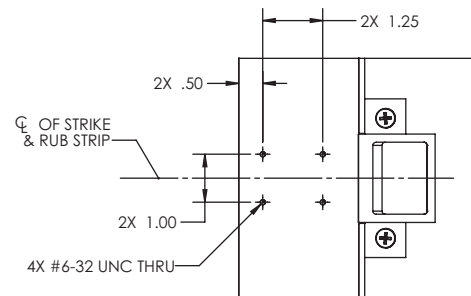

Step 4: Secure the 604 Rub Strip to the door frame using the four #6-32 x 1/4" screws provided.

