



# 8200 Mortise Lock with ALP Trim 130KALP Turn/184KALP Emergency Release INSTALLATION INSTRUCTIONS

**SARGENT®**  
**ASSA ABLOY**

For assistance, contact SARGENT at 800-727-5477 or [www.sargentlock.com](http://www.sargentlock.com)

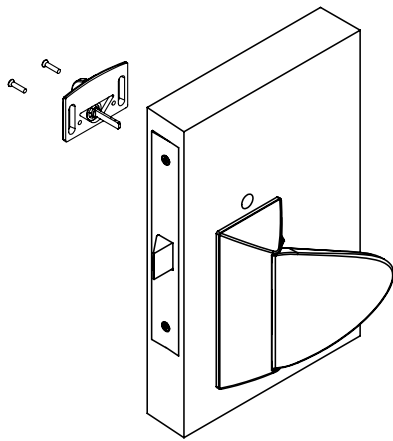

- 1) Install lock & trim per instructions A8053
- 2) Position the Turn/Emergency Release on the door, engaging the lockbody, parallel and flush with the paddle cover
- 3) Mark mounting hole locations using the Turn/Emergency Release as the template
- 4) For wood doors: drill (2) 1/16" (.062) diameter holes for #6 wood screws and for metal doors: drill & tap for #6-32 machine screws
- 5) Secure Turn/Release to door with screws supplied

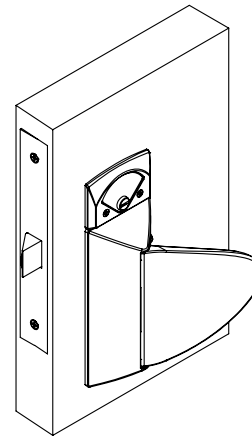


Emergency Button

**NOTE:** Use of the 184KALP and 130KALP together may require the tail pieces to be shortened to prevent interference.

FOLD HERE FOR LHRB

**Note:** 184KALP Emergency Release is used on the outside of the door, while the 130KALP Turn is used on the inside of the door

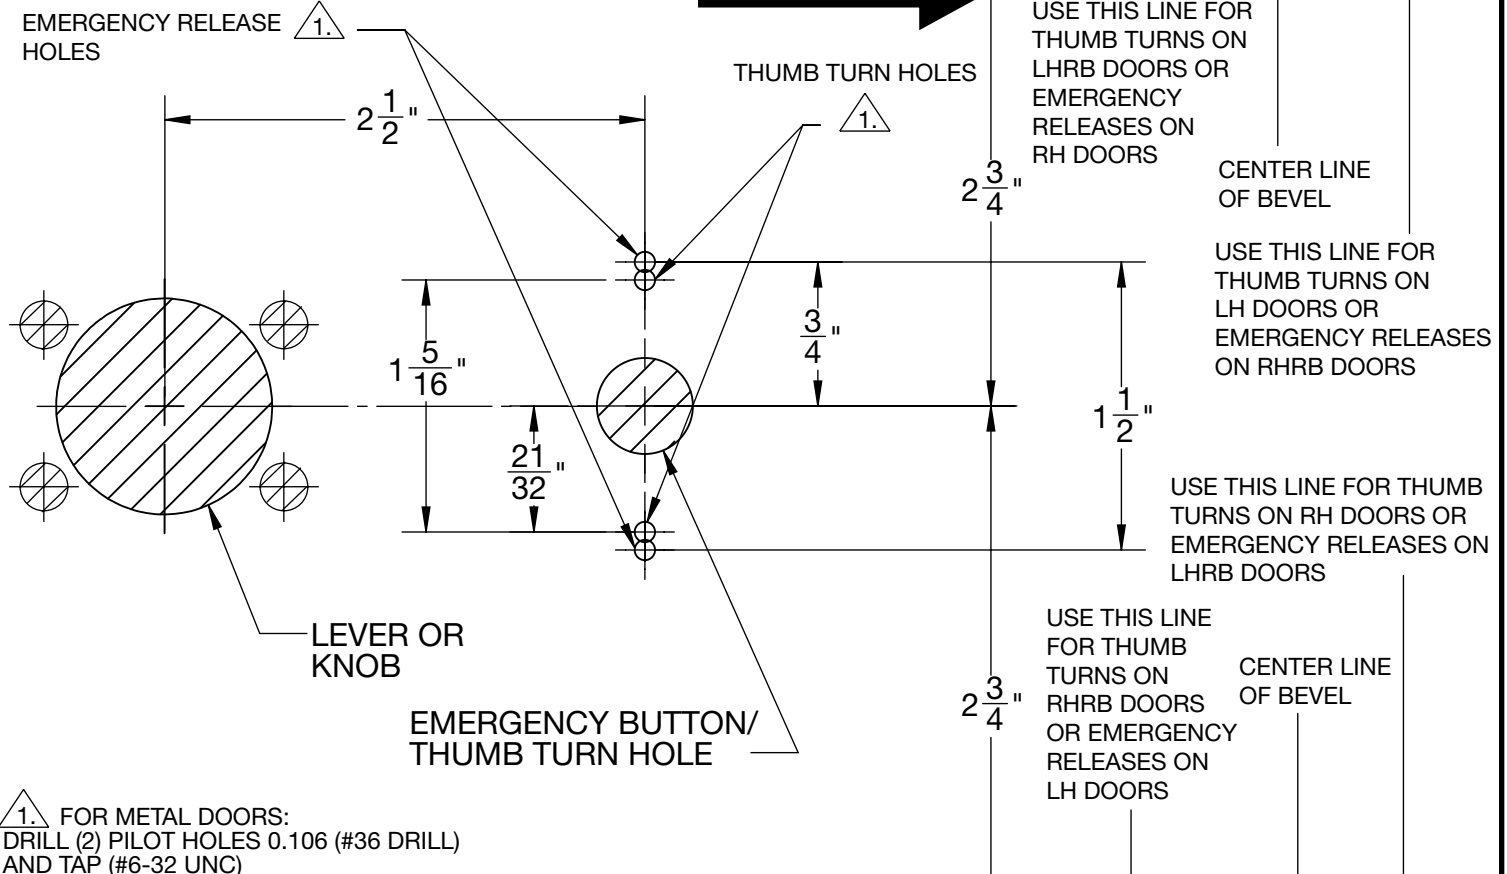

FOLD HERE FOR RHRB