


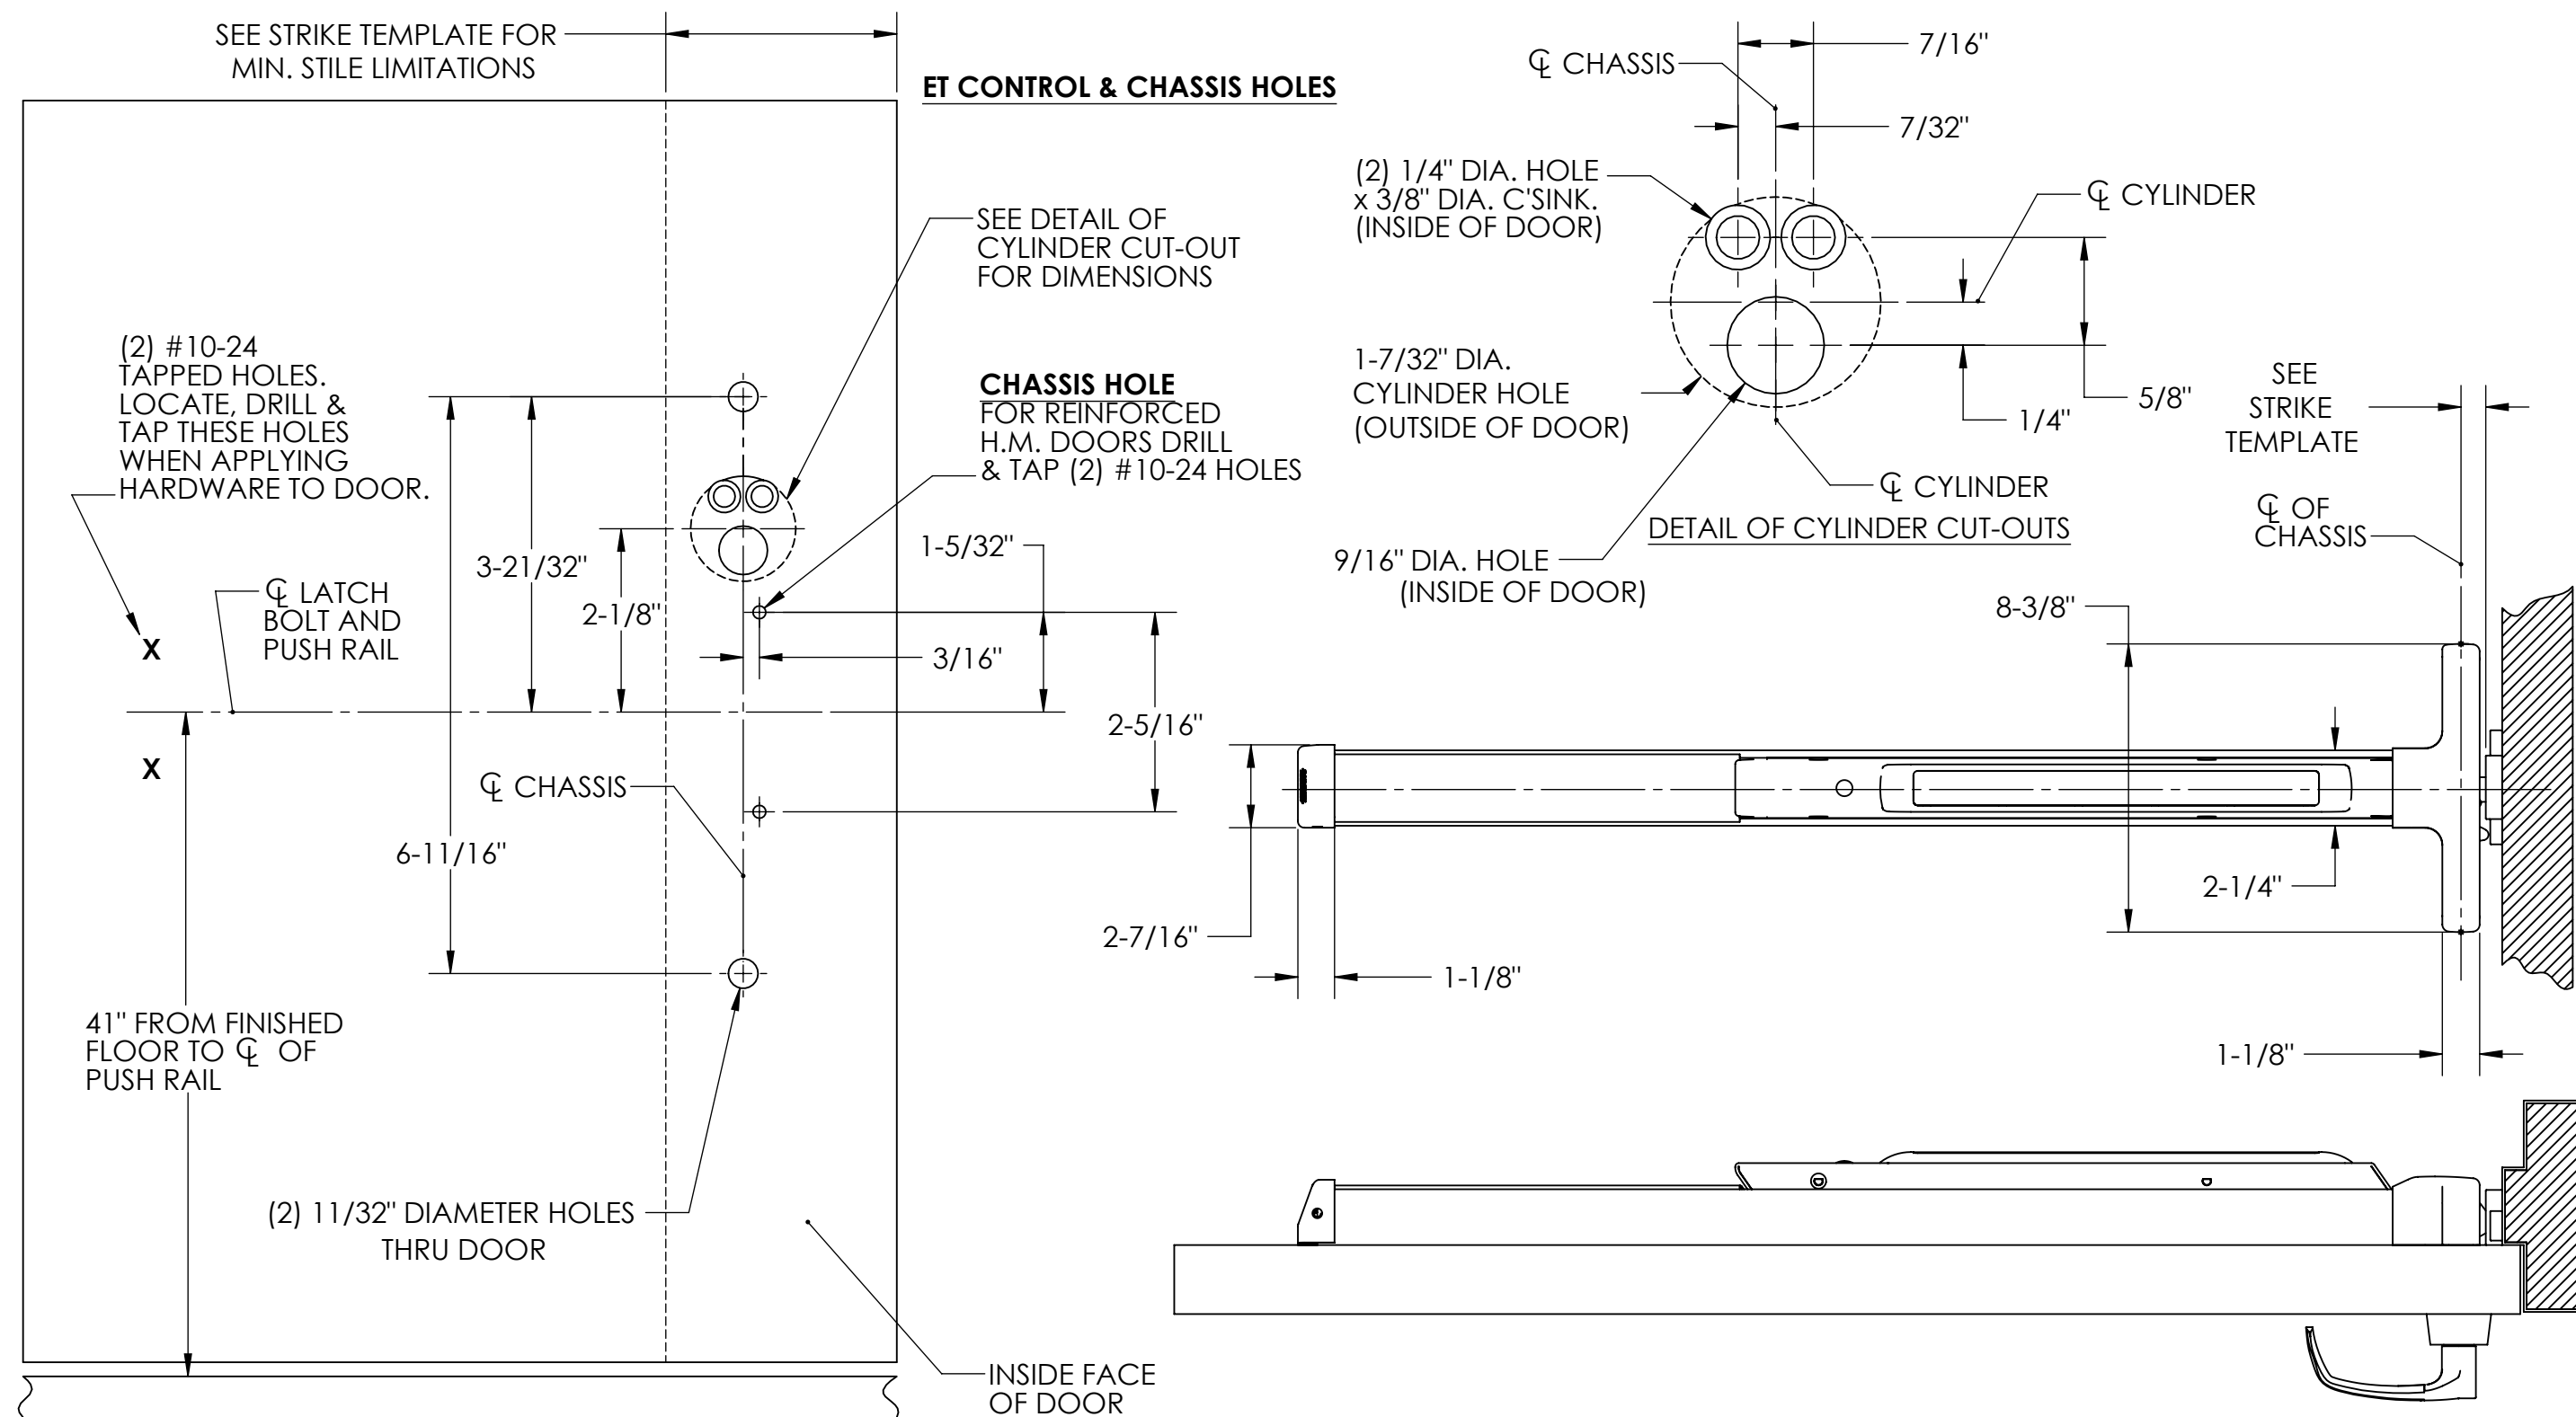

NOTES:

1. TOLERANCE ON ALL DIMENSIONS IS +/-1/64".
2. WE RECOMMEND THAT ALL TAPPED HOLES BE DRILLED & TAPPED IN THE FIELD.
3. SEE STRIKE TEMPLATE FOR MOUNTING LOCATION OF STRIKE.
4. SEE MASTER SHEET No. 4019 FOR AREAS REQUIRING REINFORCEMENTS.
5. SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED MUST BE FLUSH.

SARGENT
ASSA ABLOY

Sargent Manufacturing Company
100 Sargent Drive New Haven, CT 06511

TEMPLATE: 8500, 12-8500, AD-8500, &
WS-AD-8500 NARROW DESIGN RIM TYPE
EXIT DEVICE x 704 & 744 ET CONTROL

RELEASE DATE
JAN. 11, 2011
TEMPLATE NO.
4411 G