


### Installation Instructions for 7800/8200/9200 Mortise Lock Anti-Vandal (AV-) Pull Trim or 667 Anti-Vandal Trim Kit

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • [www.sargentlock.com](http://www.sargentlock.com)

ASSA ABLOY, the global leader  
in door opening solutions

#### 667-1 Pull Trim Shown

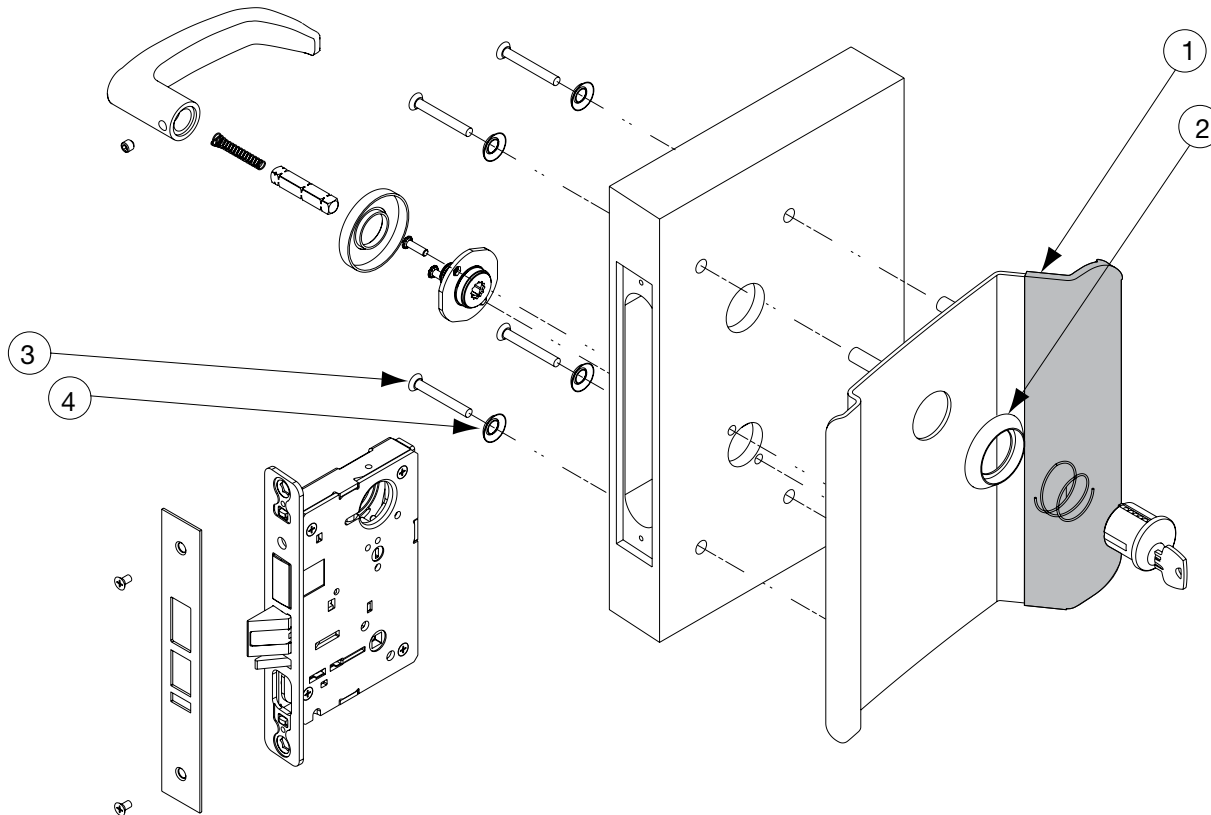

| Item | Description                                          |      |                                             | Qty. | Part Number |
|------|------------------------------------------------------|------|---------------------------------------------|------|-------------|
| 1    | Kit                                                  | Hand | Function                                    |      |             |
|      | 667-1                                                | RHRB | 04, 06, 17, 28, 29, 30, 50, 51, 52, 91 & 92 | 1    | 82-4034     |
|      | 667-2                                                | LHRB | 04, 06, 17, 28, 29, 30, 50, 51, 52, 91 & 92 | 1    | 82-4035     |
|      | 667-3                                                | RHRB | 03, 20, 21, 23, 23, & 31                    | 1    | 82-4036     |
|      | 667-4                                                | LHRB | 03, 20, 21, 22, 23, & 31                    | 1    | 82-4037     |
|      | 667-5                                                | RHRB | Inactive Door, without lip or holes         | 1    | 82-4044     |
|      | 667-6                                                | LHRB | Inactive Door, without lip or holes         | 1    | 82-4045     |
| 2    | 1SB Cylinder Rosette Pack                            |      |                                             | 1    | 92-2071     |
| 3    | 1/4"-20 x 1-1/4" Metal/Machine Screw - Phillips head |      |                                             | 4    | 01-3454     |
| 4    | Cup Washer                                           |      |                                             | 4    | 01-0225     |

**For proper trim installation, prep door with instructions and templates supplied with mortise lock or template A7050 (included with AV trim).**

1. Install lock per instructions supplied **substituting AV Pull Trim for outside trim or escutcheon**. Outside spindle is not used with AV Pull Trim.
2. Insert mounting posts through door and attach trim with four 1/4-20 machine screws and cup washers. Tighten securely.
3. Complete assembly of inside rose/trim, cylinder and lock front.
4. Check lock for correct operation before closing door.

Copyright © 2009, 2010, 2013, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.