

INSTALLATION INSTRUCTIONS FOR 52-2593 KEYPAD SHROUD FOR USE WITH KP AND PROFILE SERIES ACCESS CONTROL PRODUCTS

KP Series


1. Remove paper backing from gasket, place above keypad escutcheon and press firmly.
2. Using spacer with **mounting holes below centerline** as template, mark and drill three (3) 3/16" x 1/2" deep holes. If anchors are not used, use a #32 size drill.
3. Insert anchors (if required) and complete installation.

Profile Series


1. Mark a level line 1-1/2" above the top edge of the outside escutcheon.
2. Remove paper backing from gasket, place just above the marked line and press firmly.
3. Place spacer on top of gasket and complete installation from step 2 in KP Series.

Note: For exterior installations the use of weatherseal gaskets (ordered separately) to seal between the escutcheon and door is recommended.

KP Series

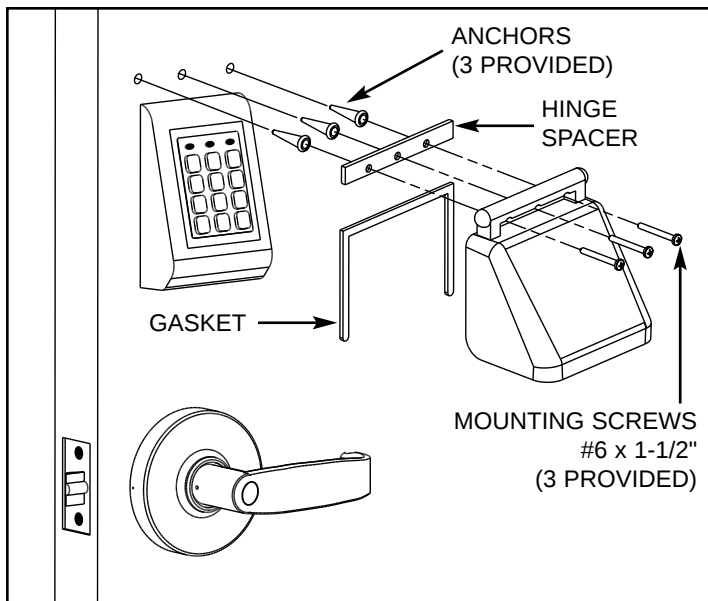

Profile Series

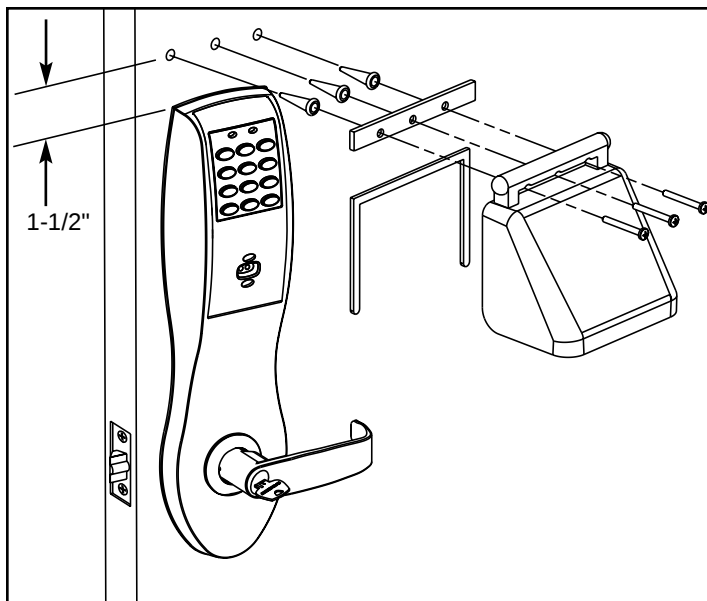

Optional Weatherseal Gaskets For Outside Escutcheons

