


INSTRUCTIONS FOR INSTALLING SARGENT® #130 TURN KNOB AND #184 EMERGENCY BUTTON

- 1ST** INSERT ALIGNER INTO LOCK THEN SLIDE BACK PLATE ON TO ALIGNER. * POSITION BACK PLATE, AS SHOWN, LINING UP FLAT * * ON BACK PLATE WITH A CARPENTERS SQUARE. MARK SCREW HOLE LOCATIONS AND APPLY SCREWS.

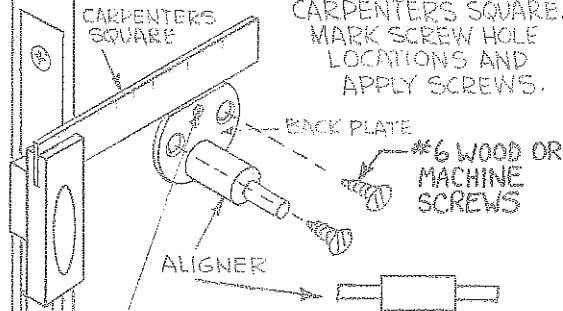


DRILL $\frac{3}{16}$ " DIAM. $\times \frac{1}{16}$ " DEEP HOLE IN DOOR FOR ROSE MOUNTING SCREW CLEARANCE

* INSERT ALIGNER END WHICH BEST FITS LOCK

* * 7723, 8223 & 4873 FUNCTIONS ASSEMBLY MUST BE INVERTED


SARGENT®

- 2ND** APPLY TURN KNOB OR EMERGENCY BUTTON AS SHOWN BY SCREWING ROSE TO BACK PLATE WITH THE #6-32 $\times \frac{1}{16}$ " MACHINE SCREW PROVIDED.

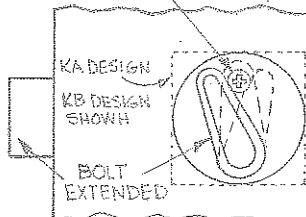

NOTE: TURN KNOB SHOULD COVER SCREW HEAD WHEN BOLT IS RETRACTED

NOTE: USE OF EMERGENCY BUTTON MAY REQUIRE BREAKING OFF OF THE TURN PIECE SPINDLE

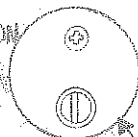

EMERGENCY BUTTON