

6400V - PANIC & 6400VF - FIRE LABELED SURFACE VERTICAL ROD EXIT DEVICES

TEMPLATE: 639313
REV. 0 01-07-21

6400 SERIES EXIT DEVICES USING SNB OR SURFACE MOUNT FASTENERS


DEVICE

MACHINE SCREWS: USE #7 OR 13/64" DRILL AND 1/4-20 TAP
WOOD SCREWS: USE 5/32" DRILL
SEX NUTS: USE 3/8" DRILL PULL SIDE USE 9/32" DRILL PUSH SIDE

NOTES:

1. VERIFY PRINTED TO SCALE
2. SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURER'S RECOMMENDATIONS
3. SEE TRIM TEMPLATE (IF APPLICABLE) FOR RELATED MACHINING DETAILS
4. DIMENSION "X" SIZED FOR DOOR. REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR NARROWER OPENING
5. CHECK PDQ WEBSITE FOR MOST RECENT REVISION
WWW.PDQLOCKS.COM

MINIMUM STILE WIDTH	APPLICATION
3 1/2" STILE	HOLLOW METAL - SOLID CORE
2 1/8" STILE	AL STOREFRONT

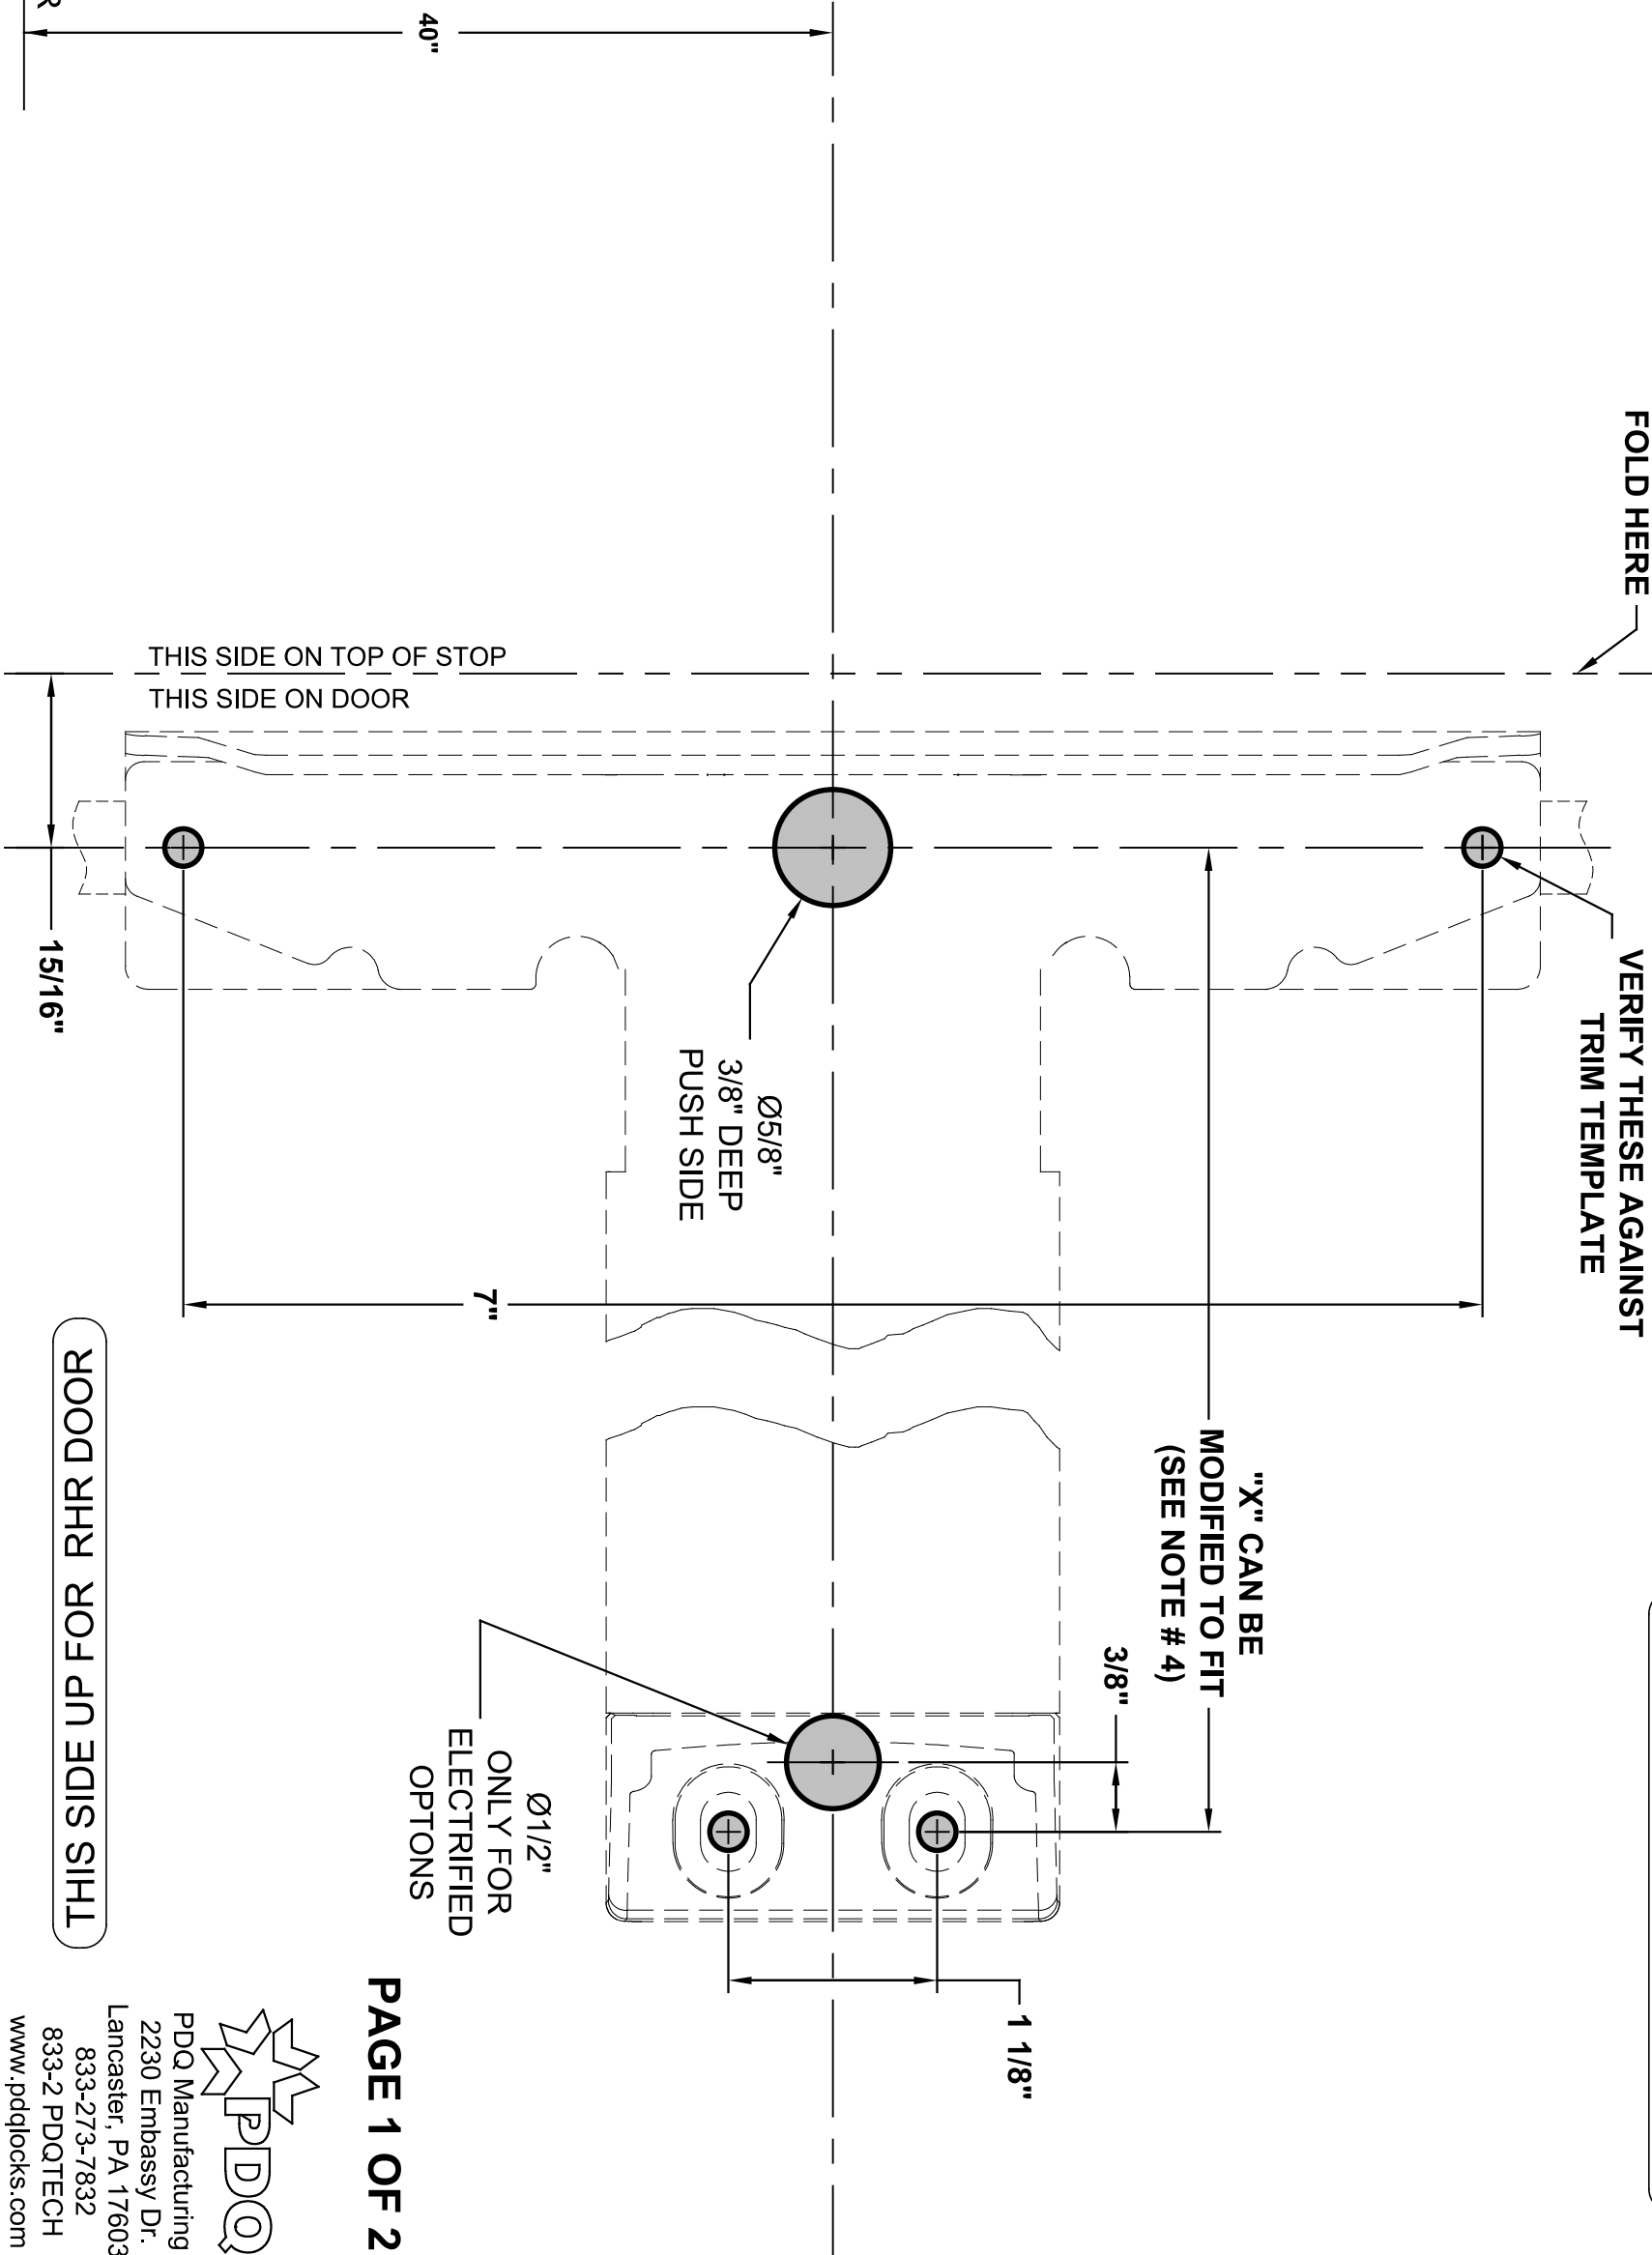

TOP STRIKE

MACHINE SCREWS:
USE #25 OR 5/32" DRILL
AND #10-24 TAP






FOLD HERE, PLACE
AGAINST DOOR & STOP

TOP/BOTTOM LATCH TO DOOR

MACHINE SCREWS:
USE #7 OR 13/64" DRILL AND 1/4-20 TAP

WOOD SCREWS:
USE 5/32" DRILL


SEX NUTS:
USE 3/8" DRILL PULL SIDE
USE 9/32" DRILL PUSH SIDE

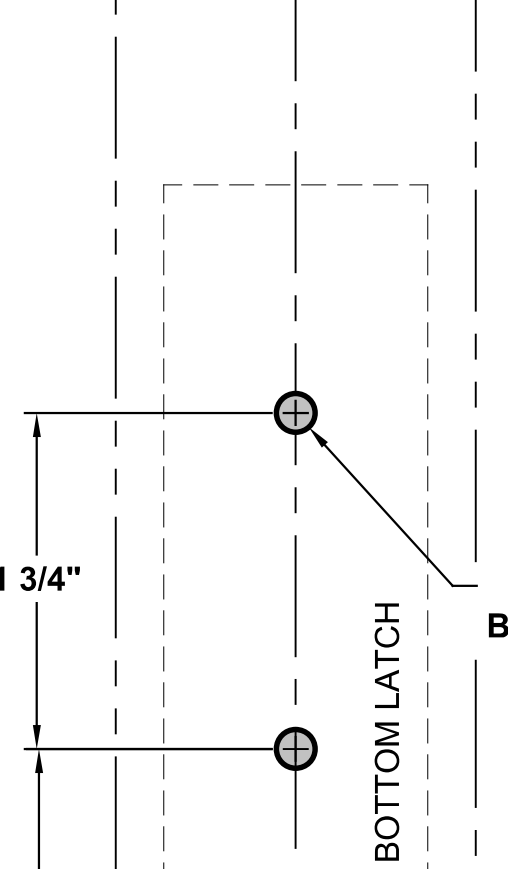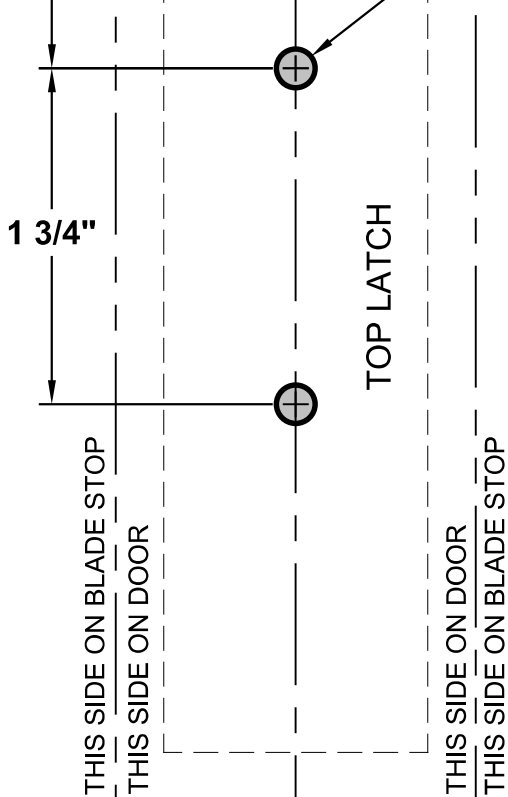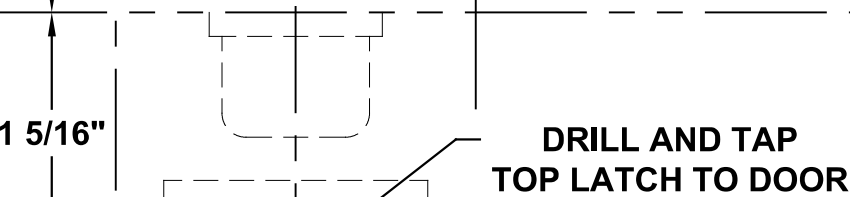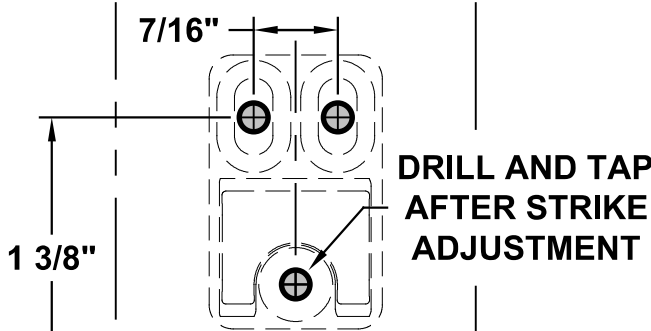

PUSH SIDE FACE OF DOOR

BOTTOM EDGE OF DOOR

DOOR EDGE

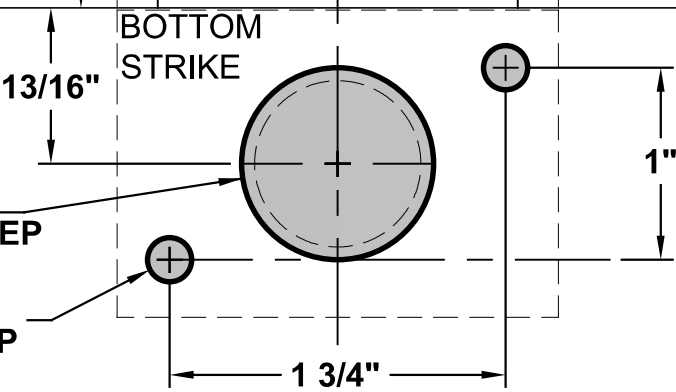

FINISHED FLOOR
FOLD HERE, PLACE
AGAINST FLOOR & DOOR

