
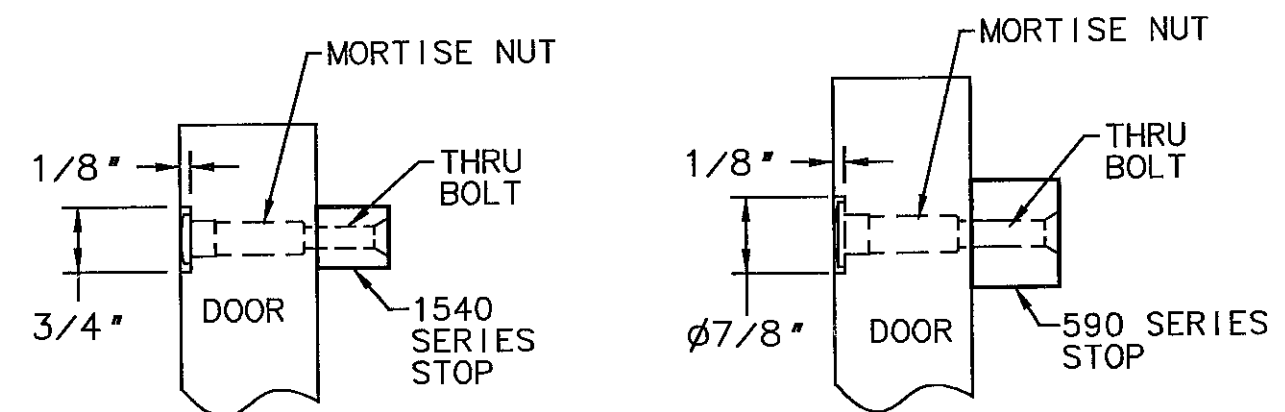
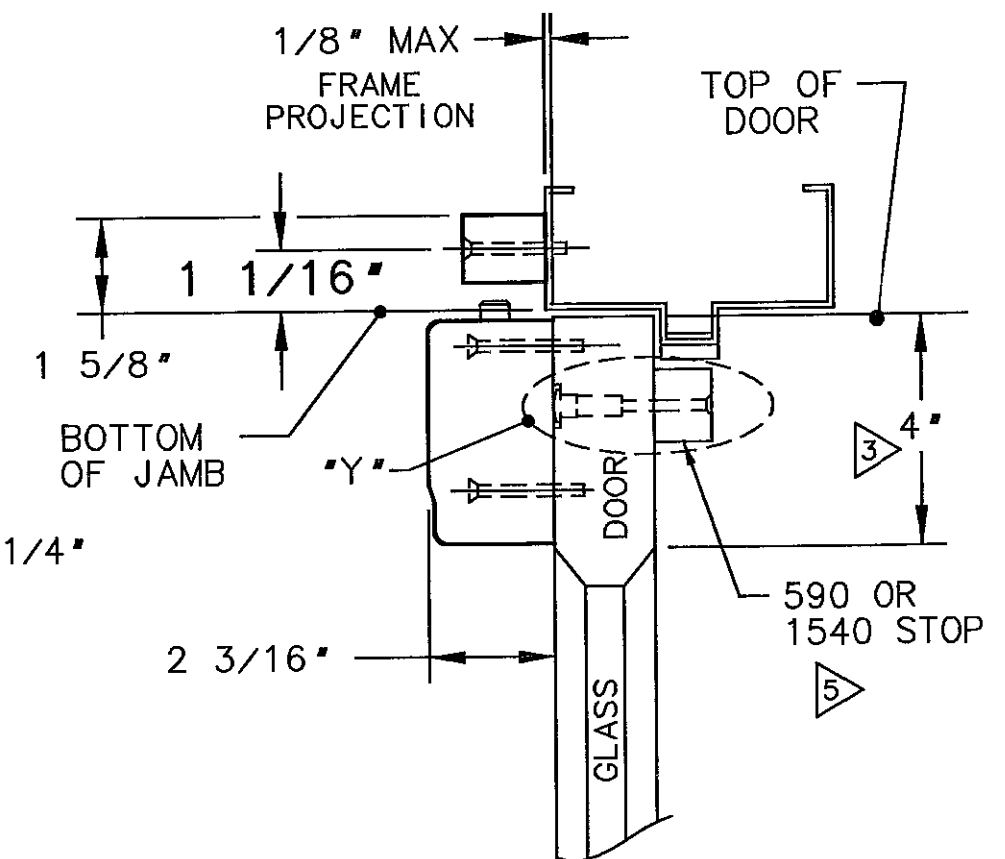


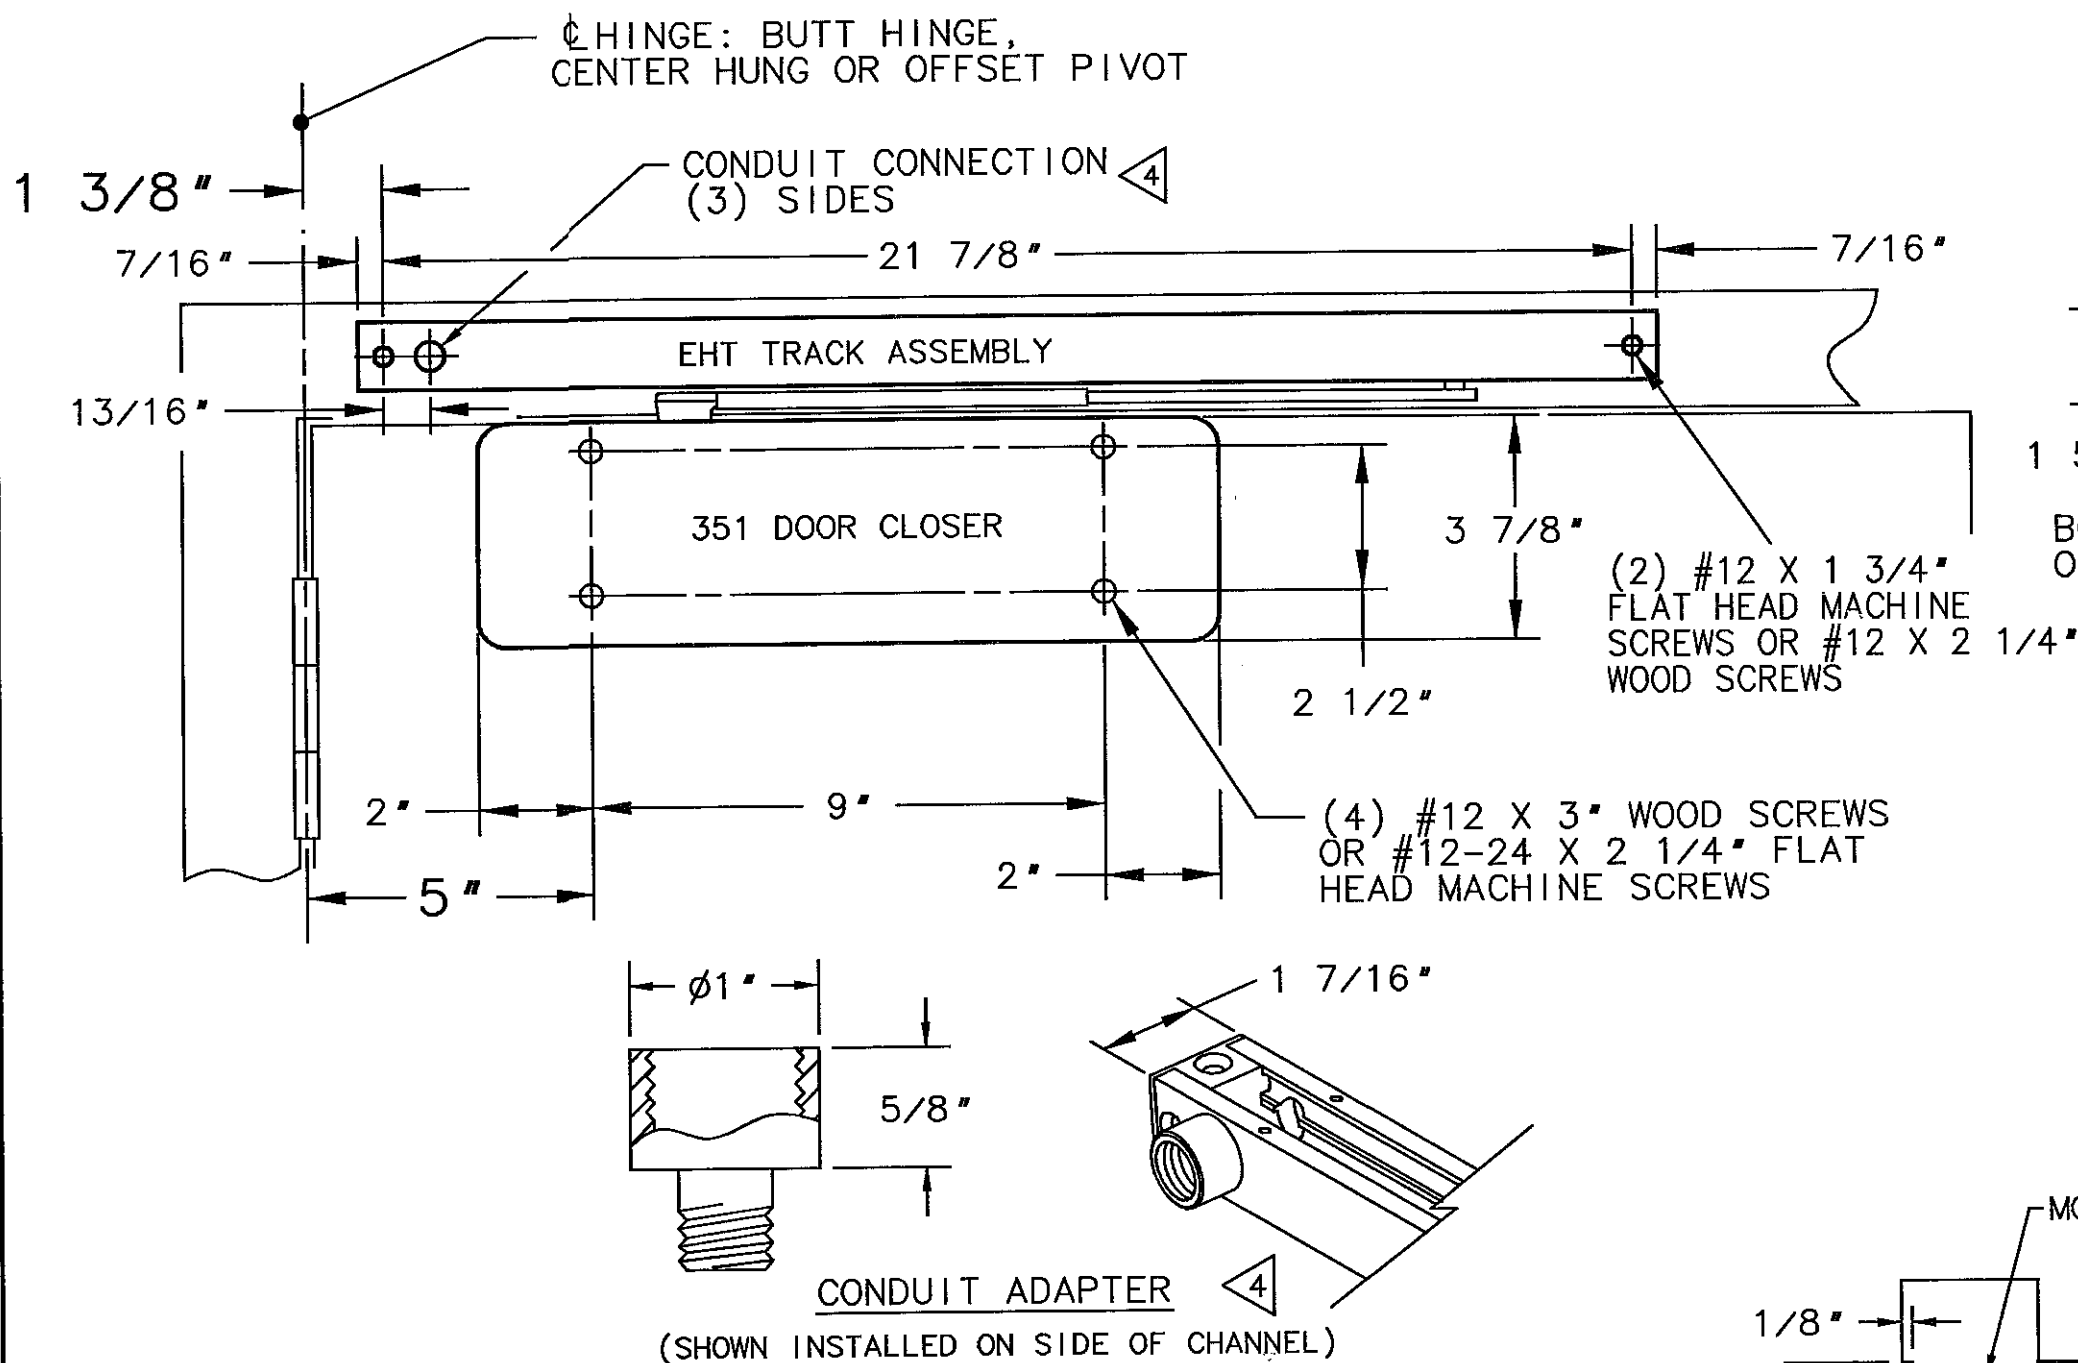

VIEW "Y"

MORTISE NUT HEADS MUST BE RECESSED INTO DOOR WHEN CONFLICTS OCCURS.

NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.
3. FOR NARROW RAIL DOORS (WIDER THAN 2 1/4"), USE 351-A DROP PLATE, SEE TEMPLATE A6772.
4. (3) HOLES ARE PROVIDED FOR THE CONDUIT CONNECTION. AN ADAPTER IS INCLUDED THAT ACCEPTS STANDARD 1/2" THREADED CONDUIT.
5. OVERHEAD STOPS SHOULD BE INSTALLED AT THE DOOR POSITION (85°-110°) AS GIVEN IN THE TABLES ON TEMPLATES A7479-A7481 FOR 597-599 INSTALLATIONS AND A7488-A7490 FOR 1546-1549 INSTALLATIONS. THE ACTUAL HOLD OPEN POSITION CAN THEN BE SET BY ADJUSTING THE LENGTH OF THE 351-EHT ARM. THE EHT ARM SHOULD BE ADJUSTED SO THAT THE DOOR HOLDS OPEN JUST PRIOR TO THE STOP POSITION.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 351EHT SERIES
CLOSER-HOLDER, PULL SIDE
APPLICATION WITH 590 OR 1540
SERIES STOP

EFFECTIVE DATE
17 JULY 03
TEMPLATE NO.
A7637 A