

INSTALLATION INSTRUCTIONS for 1655 Locker Lock

SARGENT®
ASSA ABLOY

FOR ASSISTANCE, CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com


ASSA ABLOY, the global leader
in door opening solutions

Tools

#2 Phillips Head Screwdriver

Door Preparation

1. Prepare reinforced door and frame to template 4696.

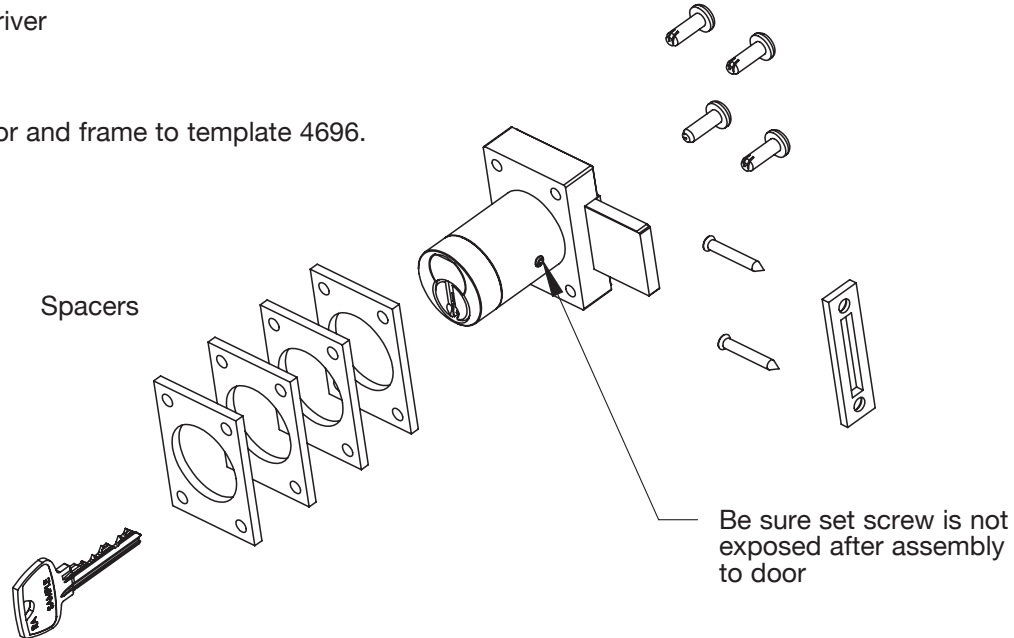

Note: the number of spacers used depends
on the thickness of the door.

Installation

Insert locker lock into prepared door and secure with 4 screws provided.

For doors between 1" and 1-1/2" thick use spacers provided to conceal cylinder retaining set screw.
Secure strike with screws provided.

Re-pinning instructions


2. To re-pin cylinder remove lock from door.

Using 2 mm Allen wrench, remove cylinder retaining set screw as shown.

Insert key and turn 90° CW and pull key to extract cylinder and retainer from lock.

Remove retainer from cylinder and re-pin as typical dead bolt cylinder.

Reverse steps to reassemble.

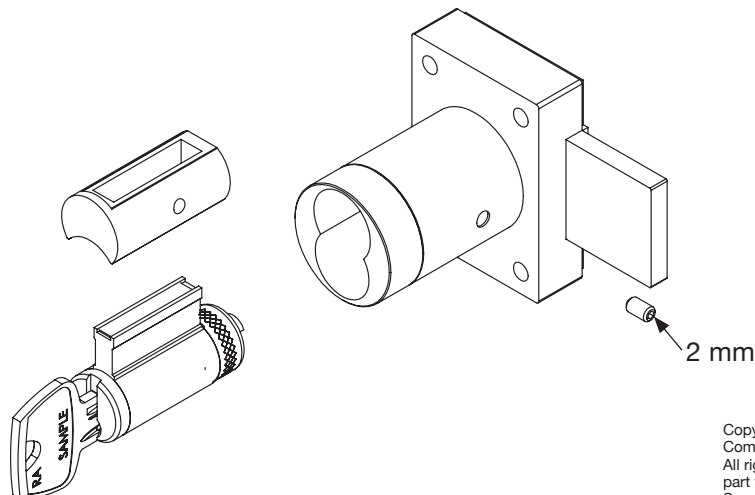

Copyright © 2011, Sargent Manufacturing
Company, an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in
part without the express written permission of
Sargent Manufacturing Company is prohibited.

A8101:B 9-30-11